

This exploded view diagram illustrates the assembly of a server chassis. The components are labeled with part numbers and assembly sequence markers (A01 through A45). The diagram shows the following components and their assembly sequence:

- Chassis Frame:** *A01 (Main chassis frame), *A02 (Top cover), *A03 (Front panel), *A04 (Rear panel), *A05 (Bottom cover), *A06 (Front panel), *A07 (Rear panel), *A08 (Front panel), *A09 (Rear panel), *A10 (Front panel), *A11 (Rear panel), *A12 (Front panel), *A13 (Rear panel), *A14 (Front panel), *A15 (Rear panel), *A16 (Front panel), *A17 (Rear panel), *A18 (Front panel), *A19 (Rear panel), *A20 (Front panel), *A21 (Rear panel), *A22 (Front panel), *A23 (Rear panel), *A24 (Front panel), *A25 (Rear panel), *A26 (Front panel), *A27 (Rear panel), *A28 (Front panel), *A29 (Rear panel), *A30 (Front panel), *A31 (Rear panel), *A32 (Front panel), *A33 (Rear panel), *A34 (Front panel), *A35 (Rear panel), *A36 (Front panel), *A37 (Rear panel), *A38 (Front panel), *A39 (Rear panel), *A40 (Front panel), *A41 (Rear panel), *A42 (Front panel), *A43 (Rear panel), *A44 (Front panel), *A45 (Rear panel).
- Internal Components:** *A01 (Main chassis frame), *A02 (Top cover), *A03 (Front panel), *A04 (Rear panel), *A05 (Bottom cover), *A06 (Front panel), *A07 (Rear panel), *A08 (Front panel), *A09 (Rear panel), *A10 (Front panel), *A11 (Rear panel), *A12 (Front panel), *A13 (Rear panel), *A14 (Front panel), *A15 (Rear panel), *A16 (Front panel), *A17 (Rear panel), *A18 (Front panel), *A19 (Rear panel), *A20 (Front panel), *A21 (Rear panel), *A22 (Front panel), *A23 (Rear panel), *A24 (Front panel), *A25 (Rear panel), *A26 (Front panel), *A27 (Rear panel), *A28 (Front panel), *A29 (Rear panel), *A30 (Front panel), *A31 (Rear panel), *A32 (Front panel), *A33 (Rear panel), *A34 (Front panel), *A35 (Rear panel), *A36 (Front panel), *A37 (Rear panel), *A38 (Front panel), *A39 (Rear panel), *A40 (Front panel), *A41 (Rear panel), *A42 (Front panel), *A43 (Rear panel), *A44 (Front panel), *A45 (Rear panel).
- Assembly Sequence:** The sequence is indicated by numbers in boxes: 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 23, 24, 25, 26, 27, 28, 29, 30, 31, 32, 33, 34, 35, 36, 37, 38, 39, 40, 41, 42, 43, 44, 45.

Table 8-21 Optional 1,500-sheet feeder main body (2 of 2)

Ref	Description	Part number	Qty
3	Cable, size sensor	RM1-5127-000CN	1
9	Remnant indication assembly	RM1-5259-000CN	1
10	Paper size detect assembly	RM1-5261-000CN	1
A01	Holder, connector		1
A02	Pin, lifter tray stopper		1
A03	Sheet, solenoid damper		1
A04	Latch, front cover, upper		1
A05	Block, front cover pushing		1
A06	Guide, paper set, right		1
A07	Guide, paper set, left		1
A08	Block, paper size sensor		1
A09	Reel, lifter wire		2
A10	Cover, lifter wire reel		2
A11	Support, wire pulley		8
A12	Cover, pulley		8
A13	Shaft, lifter drive		1
A14	Pulley, wire, front		2
A15	Pulley, wire, rear		6
A16	Cover, lifter wire reel		2
A17	Plate, lifter wire cover		2
A18	Plate, damper support		1
A19	Support, release hook, left		1
A20	Holder, hinge shaft, lower		1
A21	Guide, paper set, front		1
A22	Bushing		1
A23	Gear, 14T		1
A24	Gear, 15T		1
A25	Gear, 19T/39T		1
A26	Spring, tension		1
A27	Spring, tension		2
A28	Spring, torsion		1
A29	Gear, 16T		1
A30	Spacer, screw		2
A31	Frame, rear		1

Table 8-21 Optional 1,500-sheet feeder main body (2 of 2) (continued)

Ref	Description	Part number	Qty
A32	Frame, lower		1
A33	Frame, right		1
A34	Frame, left		1
A35	Saddle, wire		1
A36	Lifter tray assembly		1
A37	Paper pickup side plate assembly		1
A38	Left hook assembly		1
A39	Screw, with washer, M3x8		4
A40	Screw, tap, M3x6		67
A41	Screw, with washer, M3x6		2
A42	Ring, E		2
A43	Ring, E		3
A44	Pin, dowel		3
A45	Foot		2

¹ Only orderable parts have part numbers.

Figure 8-23 Optional 1,500-sheet feeder paper pickup assembly

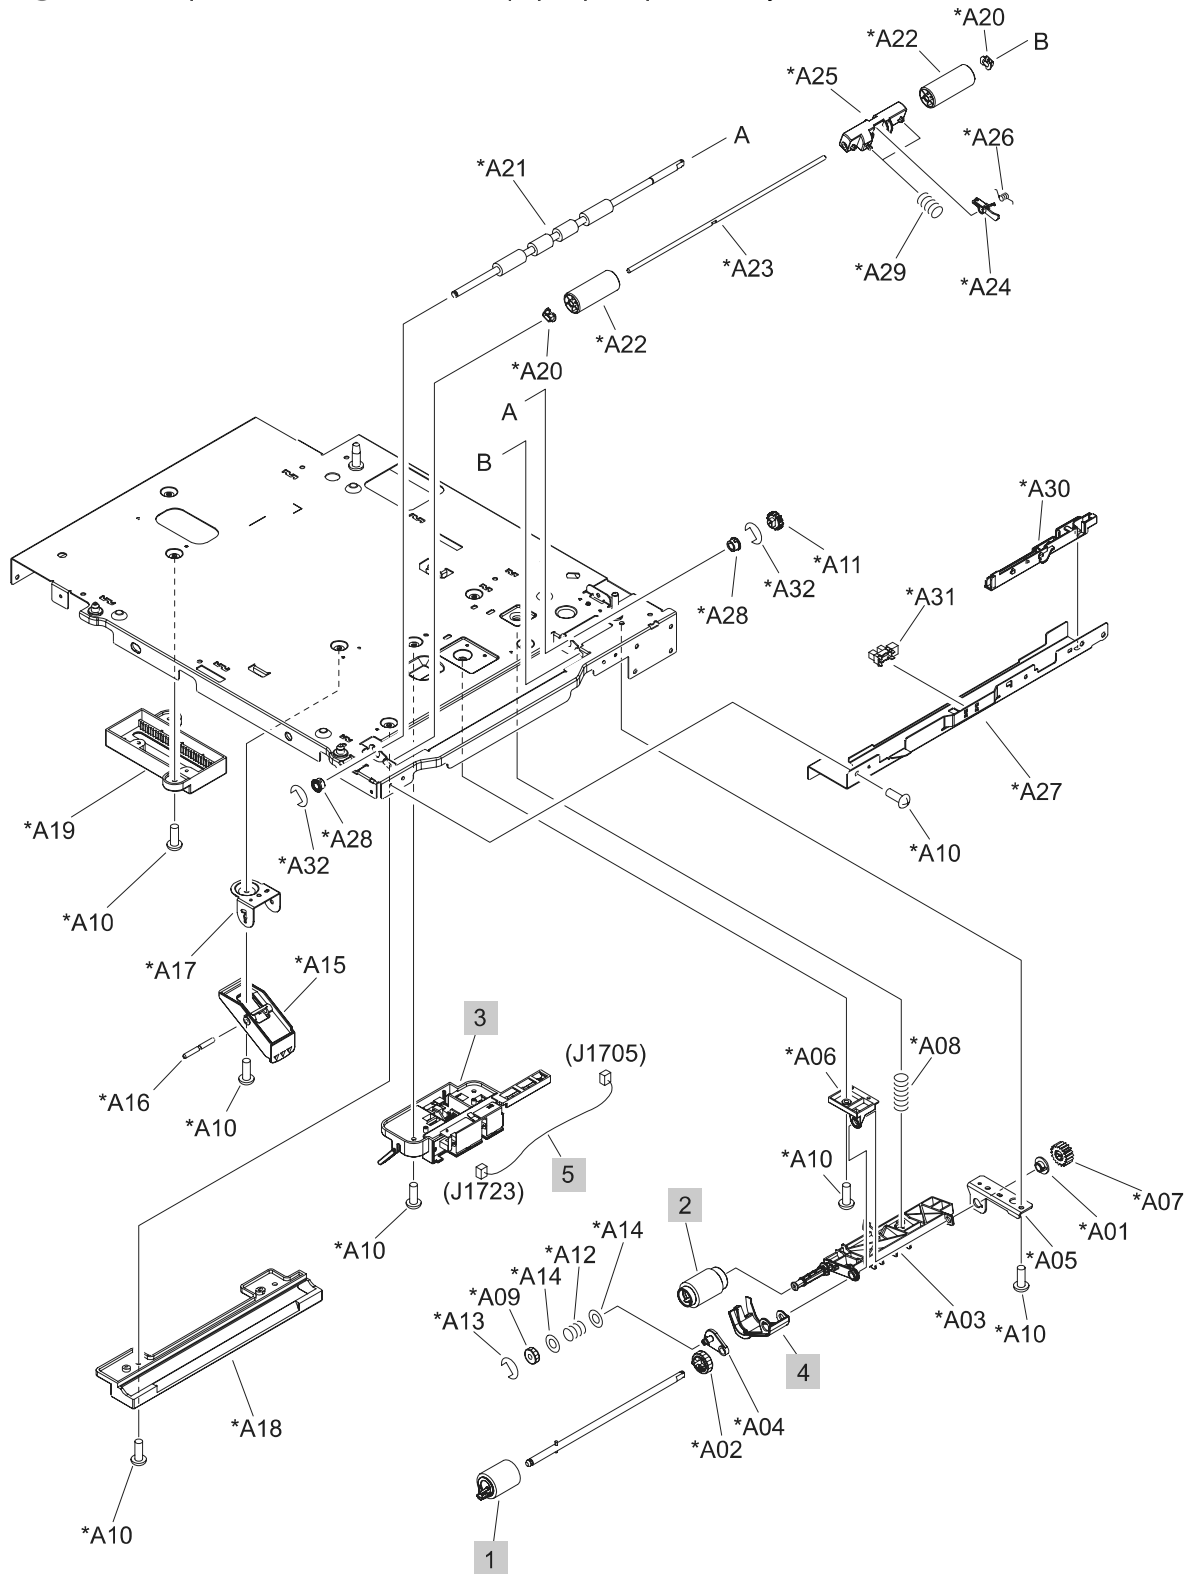


Table 8-22 Optional 1,500-sheet feeder paper pickup assembly

Ref	Description	Part number	Qty
	Product roller kit (contains 2 feed rollers, 1 pickup roller)	CB506-67904	1
1	Paper feed roller assembly	RM1-0037-020CN	1
2	Paper pickup roller assembly	RM1-0036-020CN	1
3	Paper detect sensor assembly	RM1-5264-000CN	1
4	Flag, paper detect	RC2-2524-000CN	1
5	Cable, feed, sensor	RM1-5129-000CN	1
A01	Bushing, feed shaft		1
A02	Gear, 23T		1
A03	Arm, pick		1
A04	Plate, swing		1
A05	Support, feed bushing		1
A06	Holder, feed shaft		1
A07	Gear, 18T		1
A08	Spring, compression		1
A09	Gear, 16T		1
A10	Screw, tap, M3x6		12
A11	Gear, 14T		1
A12	Spring, compression		1
A13	Ring, retainer		1
A14	Ring, slider		2
A15	Arm, paper load limit		1
A16	Shaft, load limit arm		1
A17	Holder, load limit arm		1
A18	Guide, paper outlet		1
A19	Lack, paper end limit, upper		1
A20	Bushing		2
A21	Roller, paper feed		1
A22	Roller, paper feed		2
A23	Shaft, paper feed roller		1
A24	Flag, paper feed sensor		1
A25	Holder, paper feed sensor flag		1
A26	Spring, torsion		1
A27	Plate, front upper		1
A28	Bushing		2

Table 8-22 Optional 1,500-sheet feeder paper pickup assembly (continued)

Ref	Description	Part number	Qty
A29	Spring, compression		2
A30	Guide, paper feed sensor cable		1
A31	IC, photo interrupter		1
A32	Ring, E		2

¹ Only orderable parts have part numbers.

Output devices

Figure 8-24 Multi-bin mailbox covers

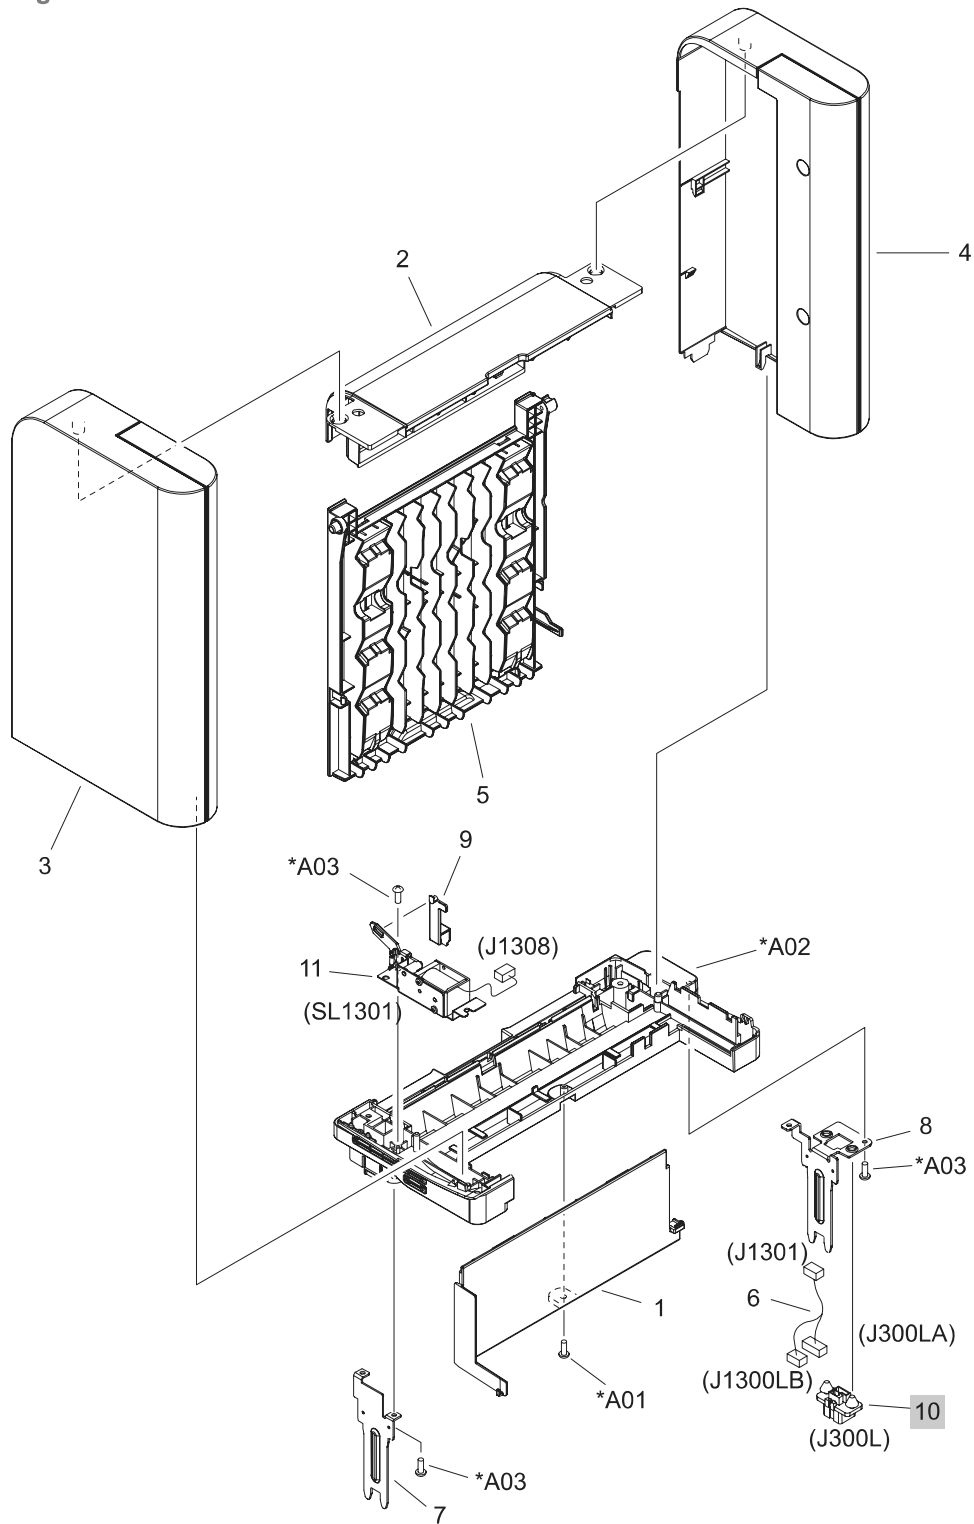


Table 8-23 Multi-bin mailbox covers

Ref	Description	Part number	Qty
1	Cover, front		1
2	Cover, top		1
3	Left cover assembly		1
4	Right cover assembly		1
5	Rear door assembly		1
6	Cable, stacker drawer		1
7	Joint, left		1
8	Joint, right		1
9	Lever, in flapper link		1
10	Connector, 8P	VS1-7500-008CN	1
11	IN solenoid assembly		1
A01	Screw, tap, binding head, M3x8		1
A02	Frame, base		1
A03	Screw, P, M3x8		3

¹ Only orderable parts have part numbers.

Figure 8-25 Multi-bin mailbox main body (1 of 2)

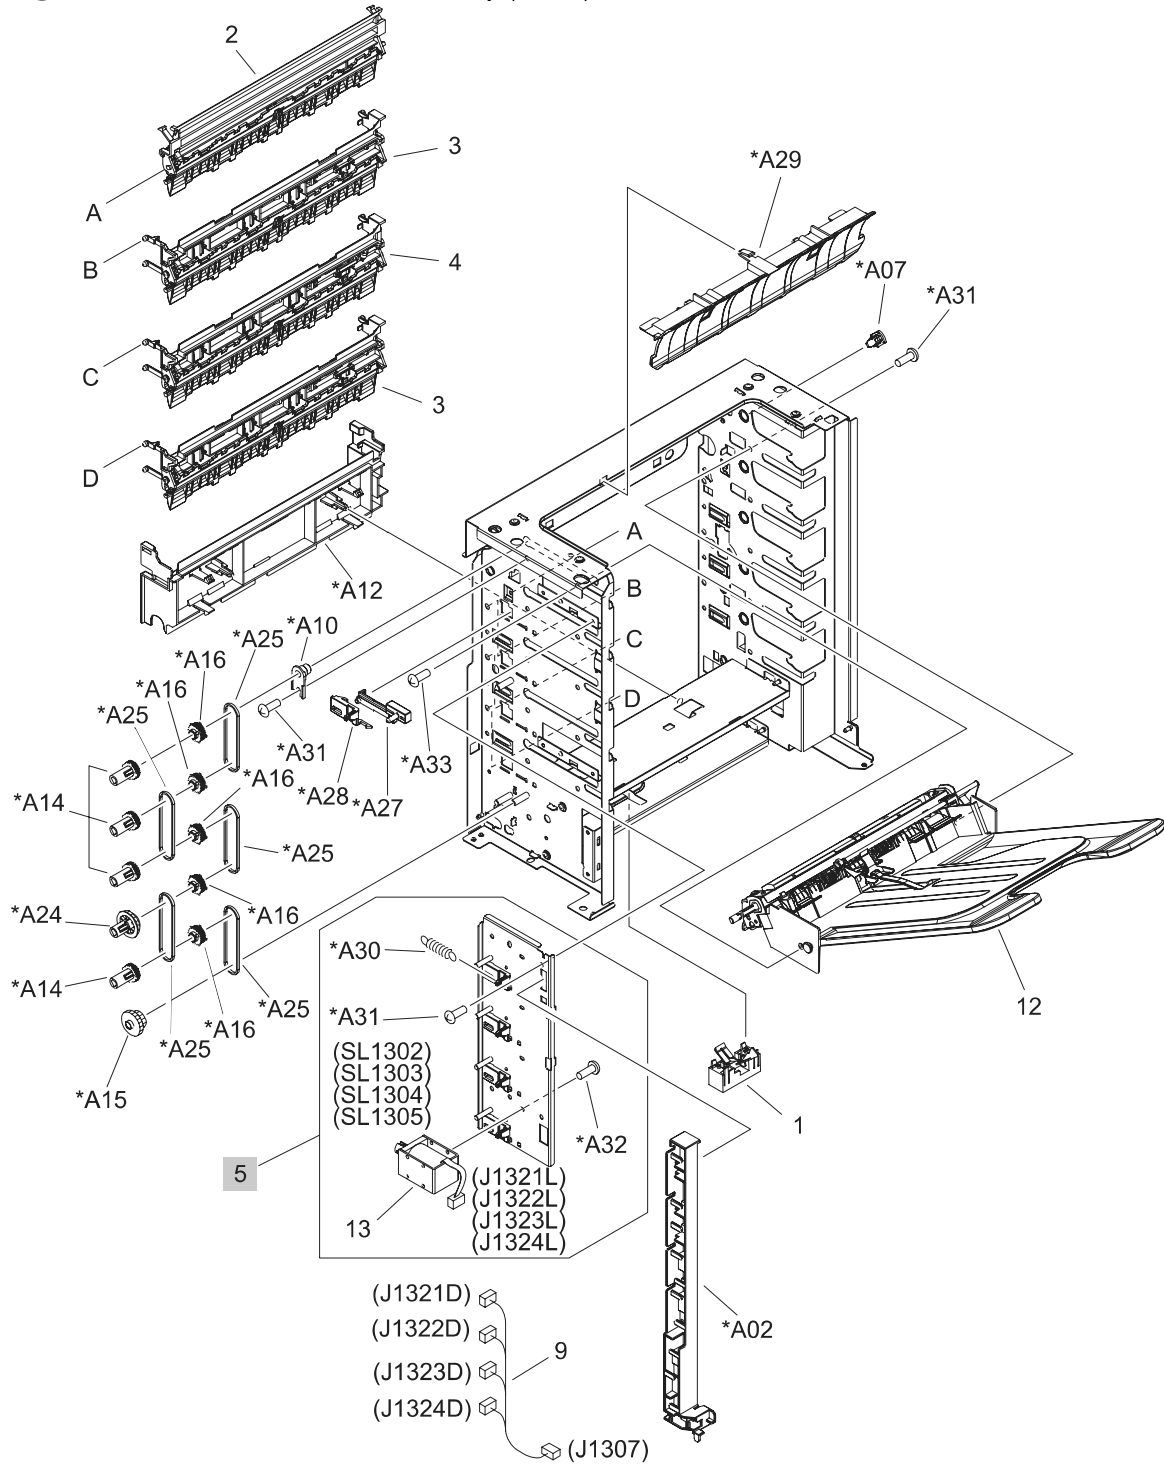


Table 8-24 Multi-bin mailbox main body (1 of 2)

Ref	Description	Part number	Qty
1	Paper sensing flag assembly		1
2	Top bin flapper assembly		1
3	Bin flapper assembly		2
4	Center bin flapper assembly		1
5	Bin solenoid assembly	RM1-5266-000CN	1
9	Cable, bin solenoid		1
12	Bin assembly		5
13	Solenoid		4
14	Frame, base		1
A01	Pad, arm		1
A02	Guide, cable, L		1
A03	Latch, rear door		1
A04	Bushing		1
A05	Stopper, rear door		1
A06	Spring, tension		1
A07	Pin		5
A08	Roller, delivery, inlet		1
A09	Bushing, pressure roller		2
A10	Bushing		5
A11	Roller, intermediate		1
A12	Cover, crossmember		1
A13	Spacer		1
A14	Pulley, 24T		4
A15	Gear, 34T/Pulley, 24T		1
A16	Pulley, 24T		5
A17	Bushing		4
A18	Spring, compression		2
A19	Gear, 24T		1
A20	Gear, 41T		1
A21	Gear, 24T/35T/48T		1
A22	Gear, 35T		1
A23	Gear, 26T		1
A24	Pulley/Gear, 34T		1
A25	Belt, timing		5

Table 8-24 Multi-bin mailbox main body (1 of 2) (continued)

Ref	Description	Part number	Qty
A26	Delivery inlet roller assembly		1
A27	Lever, bin flapper		4
A28	Base, bin lever		4
A29	Guide, crossmember		1
A30	Spring, compression		4
A31	Screw, D, M3x8		29
A32	Screw, machine, truss head, M3x4		8
A33	Screw, tap, binding head, M3x8		6
A34	Screw, tap, pan head, MM4x10		1
A35	Ring, E		2
A36	Sheet, bottom frame, right		2
A37	Sheet, bottom frame, left		2

¹ Only orderable parts have part numbers.

Figure 8-26 Multi-bin mailbox main body (2 of 2)

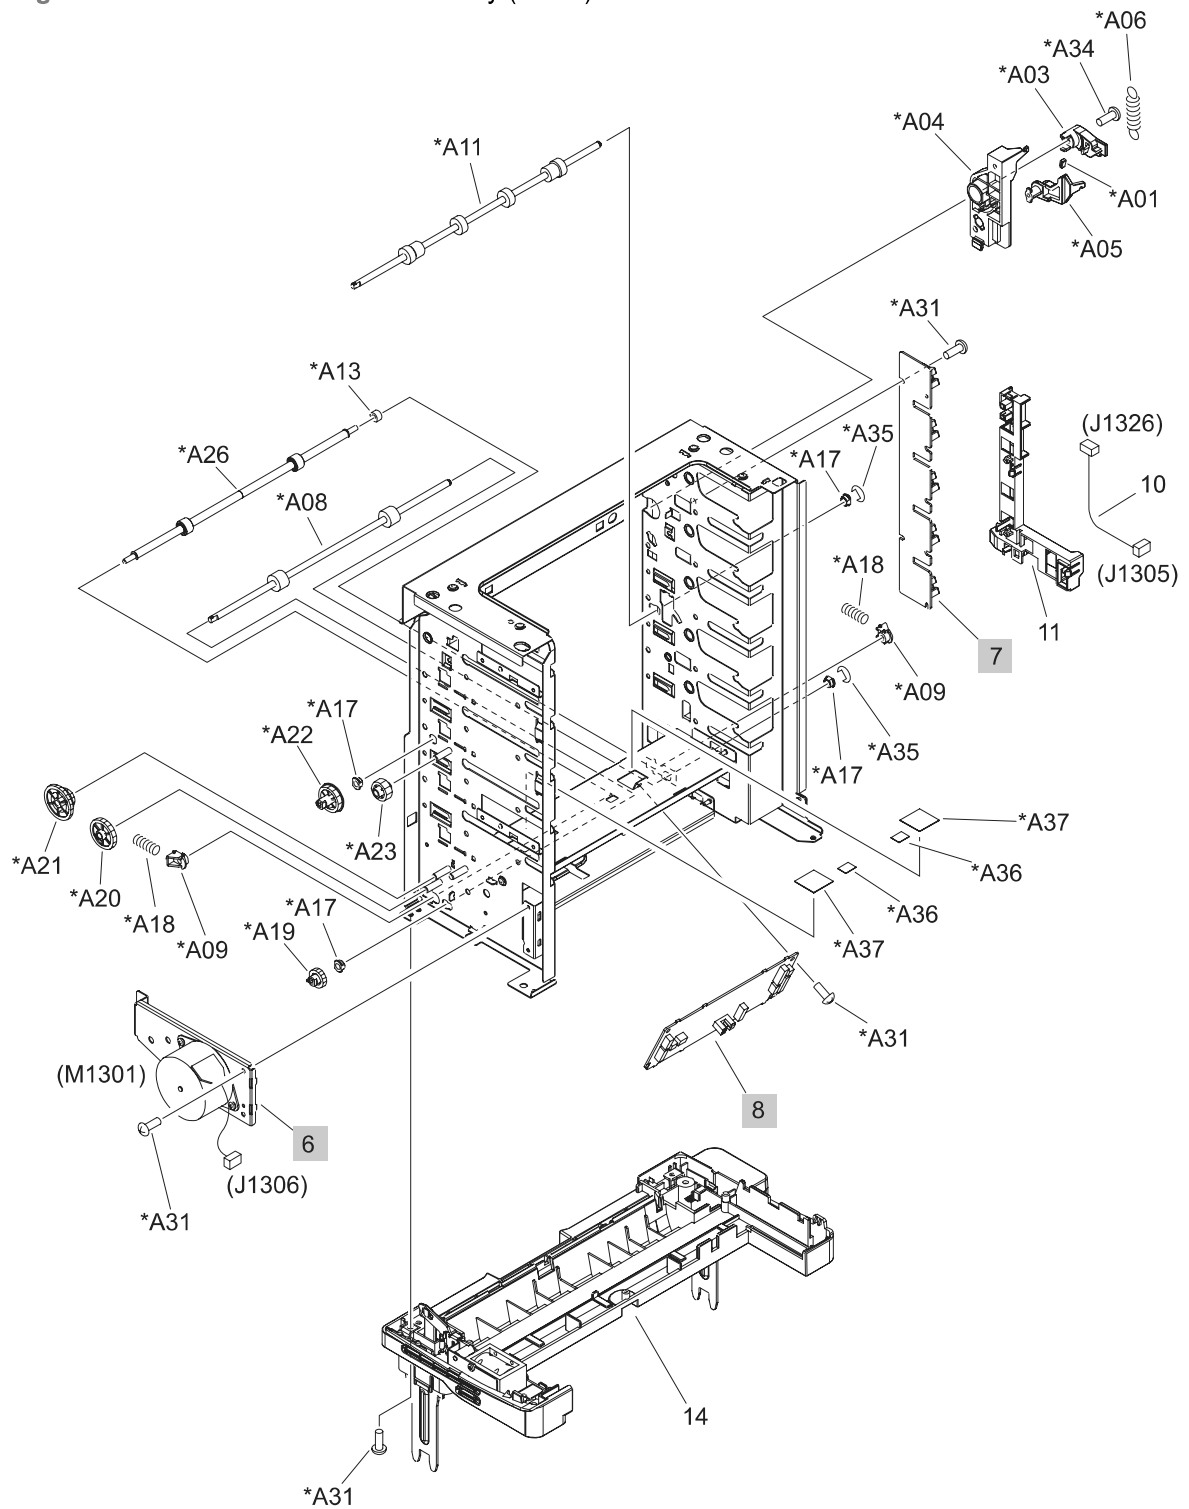


Table 8-25 Multi-bin mailbox main body (2 of 2)

Ref	Description	Part number	Qty
6	Drive assembly	RM1-5267-000CN	1
7	Sensor assembly	RM1-5096-000CN	1
8	Multi-bin mailbox PCA	RM1-6224-000CN	1
10	Cable, sensor PCA		1
11	Cable guide assembly		1
14	Frame, base		1
A01	Pad, arm		1
A02	Guide, cable, L		1
A03	Latch, rear door		1
A04	Bushing		1
A05	Stopper, rear door		1
A06	Spring, tension		1
A07	Pin		5
A08	Roller, delivery, inlet		1
A09	Bushing, pressure roller		2
A10	Bushing		5
A11	Roller, intermediate		1
A12	Cover, crossmember		1
A13	Spacer		1
A14	Pulley, 24T		4
A15	Gear, 34T/Pulley, 24T		1
A16	Pulley, 24T		5
A17	Bushing		4
A18	Spring, compression		2
A19	Gear, 24T		1
A20	Gear, 41T		1
A21	Gear, 24T/35T/48T		1
A22	Gear, 35T		1
A23	Gear, 26T		1
A24	Pulley/Gear, 34T		1
A25	Belt, timing		5
A26	Delivery inlet roller assembly		1
A27	Lever, bin flapper		4
A28	Base, bin lever		4

Table 8-25 Multi-bin mailbox main body (2 of 2) (continued)

Ref	Description	Part number	Qty
A29	Guide, crossmember		1
A30	Spring, compression		4
A31	Screw, D, M3x8		29
A32	Screw, machine, truss head, M3x4		8
A33	Screw, tap, binding head, M3x8		6
A34	Screw, tap, pan head, MM4x10		1
A35	Ring, E		2
A36	Sheet, bottom frame, right		2
A37	Sheet, bottom frame, left		2

¹ Only orderable parts have part numbers.

Alphabetical parts list

Table 8-26 Alphabetical parts list

Description	Part number	Table and page
		Optional 500-sheet feeder cassette on page 397
		Optional 500-sheet feeder cassette on page 397
1,500-sheet feeder driver PCA	RM1-6214-000CN	Optional 1,500-sheet feeder PCA on page 389
1,500-sheet feeder driver PCA	RM1-6214-000CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
500-page feeder driver PCA		Optional 500-sheet paper feeder main body on page 393
500-sheet cassette	RM1-4559-000CN	500-sheet cassette on page 373
500-sheet tray cassette	RM1-4559-000CN	Internal components (1 of 3) on page 359
Arm, front cover support		Optional 1,500-sheet paper feeder covers on page 401
Arm, lifter		500-sheet cassette on page 373
Arm, lifter		Optional 500-sheet feeder cassette on page 397
Arm, lock		Optional 500-sheet paper feeder main body on page 393
Arm, paper load limit		Optional 1,500-sheet feeder paper pickup assembly on page 413
Arm, pick		Optional 1,500-sheet feeder paper pickup assembly on page 413
Arm, release, A	RC2-2480-000CN	Internal components (1 of 3) on page 359
Arm, release, B	RC2-2481-000CN	Internal components (1 of 3) on page 359
Bar, filter, rear		Fusing assembly on page 383
Base, bin lever		Multi-bin mailbox main body (1 of 2) on page 419
Base, bin lever		Multi-bin mailbox main body (2 of 2) on page 423
Belt, timing		Multi-bin mailbox main body (1 of 2) on page 419
Belt, timing		Multi-bin mailbox main body (2 of 2) on page 423

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Bin assembly		Multi-bin mailbox main body (1 of 2) on page 419
Bin flapper assembly		Multi-bin mailbox main body (1 of 2) on page 419
Bin solenoid assembly	RM1-5266-000CN	Multi-bin mailbox main body (1 of 2) on page 419
Block, front cover pushing		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Block, front cover pushing		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Block, paper size sensor		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Block, paper size sensor		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Body, cassette		500-sheet cassette on page 373
Body, cassette		Optional 500-sheet feeder cassette on page 397
Bushing		Internal components (1 of 3) on page 359
Bushing	RC1-0206-000CN	Internal components (2 of 3) on page 363
Bushing	RC2-5783-000CN	Internal components (2 of 3) on page 363
Bushing		Internal components (2 of 3) on page 363
Bushing		Multipurpose pickup assembly on page 377
Bushing		Multipurpose pickup assembly on page 377
Bushing		Multipurpose pickup assembly on page 377
Bushing		Multipurpose pickup assembly on page 377
Bushing		Paper delivery assembly on page 381
Bushing		Paper delivery assembly on page 381
Bushing		Paper delivery assembly on page 381
Bushing		Fusing assembly on page 383

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Bushing		Fusing assembly on page 383
Bushing		Fusing assembly on page 383
Bushing		Optional 500-sheet paper feeder main body on page 393
Bushing		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Bushing		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Bushing		Optional 1,500-sheet feeder paper pickup assembly on page 413
Bushing		Optional 1,500-sheet feeder paper pickup assembly on page 413
Bushing		Multi-bin mailbox main body (1 of 2) on page 419
Bushing		Multi-bin mailbox main body (1 of 2) on page 419
Bushing		Multi-bin mailbox main body (1 of 2) on page 419
Bushing		Multi-bin mailbox main body (2 of 2) on page 423
Bushing		Multi-bin mailbox main body (2 of 2) on page 423
Bushing		Multi-bin mailbox main body (2 of 2) on page 423
Bushing, feed shaft	RC1-0264-000CN	Internal components (2 of 3) on page 363
Bushing, feed shaft		Optional 1,500-sheet feeder paper pickup assembly on page 413
Bushing, lift arm		500-sheet cassette on page 373
Bushing, lifter arm		Optional 500-sheet feeder cassette on page 397
Bushing, paper delivery	RC1-0136-000CN	Internal components (3 of 3) on page 367
Bushing, paper delivery, upper		Paper delivery assembly on page 381
Bushing, paper delivery, upper		Paper delivery assembly on page 381
Bushing, pressure roller		Multi-bin mailbox main body (1 of 2) on page 419

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Bushing, pressure roller		Multi-bin mailbox main body (2 of 2) on page 423
Cable guide assembly		Multi-bin mailbox main body (2 of 2) on page 423
Cable, bin solenoid		Multi-bin mailbox main body (1 of 2) on page 419
Cable, door sensor	RM1-5128-000CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Cable, door switch	RM1-5080-000CN	Internal components (3 of 3) on page 367
Cable, drum motor	RM1-5090-000CN	Internal components (1 of 3) on page 359
Cable, envelope feeder	RM1-5085-000CN	Internal components (3 of 3) on page 367
Cable, feed motor	RM1-5089-000CN	Internal components (2 of 3) on page 363
Cable, feed, sensor	RM1-5129-000CN	Optional 1,500-sheet feeder paper pickup assembly on page 413
Cable, FSR AC		Fusing assembly on page 383
Cable, FSR DC		Fusing assembly on page 383
Cable, full sensor	RM1-5081-000CN	Internal components (3 of 3) on page 367
Cable, fuser motor	RM1-5088-000CN	Internal components (3 of 3) on page 367
Cable, inlet (110-127 V)	RM1-5078-000CN	Power supply assembly on page 371
Cable, inlet (220-240 V)	RM1-5079-000CN	Power supply assembly on page 371
Cable, interface	RM1-5126-000CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Cable, interface, upper		Optional 500-sheet paper feeder main body on page 393
Cable, laser	RM1-5087-000CN	Internal components (2 of 3) on page 363
Cable, multipurpose sensor		Multipurpose pickup assembly on page 377
Cable, OPT DEL		Internal components (3 of 3) on page 367
Cable, option feeder		Internal components (3 of 3) on page 367
Cable, panel	RM1-5082-000CN	Internal components (3 of 3) on page 367

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Cable, sensor PCA		Multi-bin mailbox main body (2 of 2) on page 423
Cable, size sensor	RM1-5091-000CN	Internal components (1 of 3) on page 359
Cable, size sensor		Optional 500-sheet paper feeder main body on page 393
Cable, size sensor	RM1-5127-000CN	Optional 1,500-sheet feeder main body (2 of 2) on page 409
Cable, stacker drawer		Multi-bin mailbox covers on page 417
Cam		Multipurpose pickup assembly on page 377
Cam		Fusing assembly on page 383
Cam/gear, 30T		Multipurpose pickup assembly on page 377
Cam/gear, 30T		Multipurpose pickup assembly on page 377
Cap, drum gear		Internal components (1 of 3) on page 359
Case, envelope		Internal components (3 of 3) on page 367
Cassette rear assembly		500-sheet cassette on page 373
Cassette rear assembly		Optional 500-sheet feeder cassette on page 397
Center bin flapper assembly		Multi-bin mailbox main body (1 of 2) on page 419
Clamp, cable		Internal components (3 of 3) on page 367
Clamp, cord		Internal components (1 of 3) on page 359
Claw, cassette		500-sheet cassette on page 373
Claw, cassette		Optional 500-sheet feeder cassette on page 397
Clip, cable		Internal components (2 of 3) on page 363
Connector, 8P	VS1-7500-008CN	Multi-bin mailbox covers on page 417
Connector, drawer, 6P	VS1-7514-006CN	Power supply assembly on page 371
Connector, drawer, 6P		Optional 500-sheet paper feeder main body on page 393

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Connector, drawer, 6P	VS1-7500-006CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Control panel assembly (P4014)	RM1-5060-000CN	Covers—base unit on page 357
Control panel assembly (P4015/P4515)	RM1-5059-000CN	Covers—base unit on page 357
Cover, connector		Internal components (3 of 3) on page 367
Cover, crossmember		Multi-bin mailbox main body (1 of 2) on page 419
Cover, crossmember		Multi-bin mailbox main body (2 of 2) on page 423
Cover, duplexing outer (P4014)	RC2-5760-000CN	Covers—base unit on page 357
Cover, duplexing outer (P4015/P4515)	RC2-2510-000CN	Covers—base unit on page 357
Cover, envelope	RL1-1667-000CN	Internal components (1 of 3) on page 359
Cover, envelope connector (P4014)	RC2-5759-000CN	Covers—base unit on page 357
Cover, envelope connector (P4015/P4515)	RC2-2476-000CN	Covers—base unit on page 357
Cover, formatter (P4014)	RC2-5757-000CN	Covers—base unit on page 357
Cover, formatter (P4015/P4515)	RC2-2468-000CN	Covers—base unit on page 357
Cover, front		Multi-bin mailbox covers on page 417
Cover, gear		500-sheet cassette on page 373
Cover, gear		Optional 500-sheet feeder cassette on page 397
Cover, left	RC2-2642-000CN	Optional 1,500-sheet paper feeder covers on page 401
Cover, left lower	RC2-2643-000CN	Optional 1,500-sheet paper feeder covers on page 401
Cover, legal (P4014)	RC2-5761-000CN	Covers—base unit on page 357
Cover, legal (P4015/P4515)	RC2-5239-000CN	Covers—base unit on page 357
Cover, lifter wire reel		Optional 1,500-sheet feeder main body (1 of 2) on page 405

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, lifter wire reel		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Cover, lifter wire reel		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Cover, lifter wire reel		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Cover, lock	RC2-2584-000CN	Optional 1,500-sheet paper feeder covers on page 401
Cover, multipurpose spring, left		Multipurpose pickup assembly on page 377
Cover, multipurpose spring, right		Multipurpose pickup assembly on page 377
Cover, option	RC2-2459-000CN	Covers—base unit on page 357
Cover, pulley		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Cover, pulley		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Cover, rear	RC2-2640-000CN	Optional 1,500-sheet paper feeder covers on page 401
Cover, right	RC2-2641-000CN	Optional 1,500-sheet paper feeder covers on page 401
Cover, right front (P4014)	RC2-5758-000CN	Covers—base unit on page 357
Cover, right front (P4015/P4515)	RC2-2475-000CN	Covers—base unit on page 357
Cover, right rear (P4014)	RC2-5768-000CN	Covers—base unit on page 357
Cover, right rear (P4015/P4515)	RC2-2478-000CN	Covers—base unit on page 357
Cover, roller		Multipurpose pickup assembly on page 377
Cover, top		Multi-bin mailbox covers on page 417
Crossmember, front		Internal components (3 of 3) on page 367
Crossmember, fusing		Power supply assembly on page 371
Crossmember, option, left		Internal components (3 of 3) on page 367

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Crossmember, option, right		Internal components (3 of 3) on page 367
DC controller PCA	RM1-4582-000CN	Internal components (3 of 3) on page 367
DC controller PCA	RM1-4582-000CN	PCAs—base unit on page 387
Deflector, delivery		Paper delivery assembly on page 381
Delivery inlet roller assembly		Multi-bin mailbox main body (1 of 2) on page 419
Delivery inlet roller assembly		Multi-bin mailbox main body (2 of 2) on page 423
Drive assembly	RM1-5267-000CN	Multi-bin mailbox main body (2 of 2) on page 423
Duct, fourth fan		Internal components (3 of 3) on page 367
Duct, scanner protective, 1		Internal components (2 of 3) on page 363
Duct, scanner protective, 2		Internal components (2 of 3) on page 363
Duct, second fan		Internal components (3 of 3) on page 367
Electrical components assembly (110-127 V)	RM1-4549-000CN	Power supply assembly on page 371
Electrical components assembly (110-127 V)	RM1-4549-000CN	PCAs—base unit on page 387
Electrical components assembly (220-240 V)	RM1-4578-000CN	Power supply assembly on page 371
Electrical components assembly (220-240 V)	RM1-4578-000CN	PCAs—base unit on page 387
Eliminator		Fusing assembly on page 383
Face-up tray assembly (P4014)	RM1-5448-000CN	Covers—base unit on page 357
Face-up tray assembly (P4015/P4515)	RM1-4531-000CN	Covers—base unit on page 357
Fan	RK2-1988-000CN	Internal components (3 of 3) on page 367
Fan	RK2-1989-000CN	Internal components (3 of 3) on page 367
Fan	RK2-1991-000CN	Internal components (3 of 3) on page 367
Fan	RK2-1992-000CN	Internal components (3 of 3) on page 367
Feeder sensor cable assembly		Internal components (2 of 3) on page 363

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Flag, paper detect	RC2-2524-000CN	Optional 1,500-sheet feeder paper pickup assembly on page 413
Flag, paper feed sensor		Optional 1,500-sheet feeder paper pickup assembly on page 413
Flag, paper presence detect		Internal components (2 of 3) on page 363
Flag, sensor, left		Fusing assembly on page 383
Flag, sensor, right		Fusing assembly on page 383
Flag, shutter		Internal components (2 of 3) on page 363
Flag, size sensing		500-sheet cassette on page 373
Flag, size sensing		Optional 500-sheet feeder cassette on page 397
Flange, positioning roller, right		500-sheet cassette on page 373
Flange, positioning roller, right		Paper delivery assembly on page 381
Flange, positioning roller, right		Optional 500-sheet feeder cassette on page 397
Foot		Internal components (1 of 3) on page 359
Foot		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Foot		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Formatter assembly (base models)	CB437-69001 (exchange)	PCAs—base unit on page 387
Formatter assembly (base models)	CB437-67901 (new)	PCAs—base unit on page 387
Formatter assembly (network models)	CB438-69001 (exchange)	PCAs—base unit on page 387
Formatter assembly (network models)	CB438-67901 (new)	PCAs—base unit on page 387
Frame, base		Multi-bin mailbox covers on page 417
Frame, base		Multi-bin mailbox main body (1 of 2) on page 419
Frame, base		Multi-bin mailbox main body (2 of 2) on page 423
Frame, face-down		Paper delivery assembly on page 381

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Frame, left		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Frame, left		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Frame, lower		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Frame, lower		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Frame, multi, right		Multipurpose pickup assembly on page 377
Frame, rear		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Frame, rear		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Frame, right		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Frame, right		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Front cassette assembly		500-sheet cassette on page 373
Front cassette assembly		Optional 500-sheet feeder cassette on page 397
Front cassette left guide assembly		Optional 500-sheet paper feeder main body on page 393
Front cassette LF guide assembly		Internal components (3 of 3) on page 367
Front cover assembly	RM1-4534-000CN	Covers—base unit on page 357
Front door assembly	RM1-5255-000CN	Optional 1,500-sheet paper feeder covers on page 401
Front top plate assembly		Optional 500-sheet paper feeder main body on page 393
Fuser assembly (110-127 V) (also see Figure 8-13 Fusing assembly on page 382)	CB506-67901	Internal components (3 of 3) on page 367
Fuser assembly (220-240 V) (also see Figure 8-13 Fusing assembly on page 382)	CB506-67902	Internal components (3 of 3) on page 367
Fuser motor assembly	RM1-5051-000CN	Internal components (3 of 3) on page 367

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Fusing assembly (110-127 V)	CB506-67901	Fusing assembly on page 383
Fusing assembly (220-240 V)	CB506-67902	Fusing assembly on page 383
Gauge, fuel		500-sheet cassette on page 373
Gauge, fuel		Optional 500-sheet feeder cassette on page 397
Gear 35T		Internal components (3 of 3) on page 367
Gear, 14T		500-sheet cassette on page 373
Gear, 14T		500-sheet cassette on page 373
Gear, 14T		500-sheet cassette on page 373
Gear, 14T		Multipurpose pickup assembly on page 377
Gear, 14T		Optional 500-sheet paper feeder main body on page 393
Gear, 14T		Optional 500-sheet feeder cassette on page 397
Gear, 14T		Optional 500-sheet feeder cassette on page 397
Gear, 14T		Optional 500-sheet feeder cassette on page 397
Gear, 14T		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Gear, 14T		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Gear, 14T		Optional 1,500-sheet feeder paper pickup assembly on page 413
Gear, 15T		Internal components (3 of 3) on page 367
Gear, 15T		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Gear, 15T		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Gear, 15T/21T		Multipurpose pickup assembly on page 377
Gear, 15T/25T		500-sheet cassette on page 373

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Gear, 15T/25T		Optional 500-sheet feeder cassette on page 397
Gear, 16T		Optional 500-sheet paper feeder main body on page 393
Gear, 16T		Optional 1,500-sheet paper feeder covers on page 401
Gear, 16T		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Gear, 16T		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Gear, 16T		Optional 1,500-sheet feeder paper pickup assembly on page 413
Gear, 17T		Internal components (3 of 3) on page 367
Gear, 17T		Paper delivery assembly on page 381
Gear, 17T		Fusing assembly on page 383
Gear, 17T/25T		Internal components (2 of 3) on page 363
Gear, 18T	RU5-0045-020CN	Internal components (2 of 3) on page 363
Gear, 18T		Paper delivery assembly on page 381
Gear, 18T		Fusing assembly on page 383
Gear, 18T		Optional 1,500-sheet feeder paper pickup assembly on page 413
Gear, 193T		Internal components (1 of 3) on page 359
Gear, 19T/39T		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Gear, 19T/39T		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Gear, 20T		500-sheet cassette on page 373
Gear, 20T		Paper delivery assembly on page 381
Gear, 20T		Optional 500-sheet feeder cassette on page 397
Gear, 21T		Paper delivery assembly on page 381

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Gear, 23T	RU6-0159-000CN	Internal components (2 of 3) on page 363
Gear, 23T		Optional 500-sheet paper feeder main body on page 393
Gear, 23T		Optional 1,500-sheet feeder paper pickup assembly on page 413
Gear, 23T/19T		Internal components (3 of 3) on page 367
Gear, 24T		Multi-bin mailbox main body (1 of 2) on page 419
Gear, 24T		Multi-bin mailbox main body (2 of 2) on page 423
Gear, 24T/35T/48T		Multi-bin mailbox main body (1 of 2) on page 419
Gear, 24T/35T/48T		Multi-bin mailbox main body (2 of 2) on page 423
Gear, 25T/91T		Internal components (3 of 3) on page 367
Gear, 26T		Multi-bin mailbox main body (1 of 2) on page 419
Gear, 26T		Multi-bin mailbox main body (2 of 2) on page 423
Gear, 29T		Internal components (2 of 3) on page 363
Gear, 30T		Multipurpose pickup assembly on page 377
Gear, 30T/34T		Multipurpose pickup assembly on page 377
Gear, 33T		Internal components (3 of 3) on page 367
Gear, 33T		Paper delivery assembly on page 381
Gear, 34T/Pulley, 24T		Multi-bin mailbox main body (1 of 2) on page 419
Gear, 34T/Pulley, 24T		Multi-bin mailbox main body (2 of 2) on page 423
Gear, 35T		Internal components (2 of 3) on page 363
Gear, 35T		Multi-bin mailbox main body (1 of 2) on page 419
Gear, 35T		Multi-bin mailbox main body (2 of 2) on page 423
Gear, 37T		500-sheet cassette on page 373

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Gear, 37T		Optional 500-sheet feeder cassette on page 397
Gear, 37T/18T		Internal components (2 of 3) on page 363
Gear, 41T		Multi-bin mailbox main body (1 of 2) on page 419
Gear, 41T		Multi-bin mailbox main body (2 of 2) on page 423
Gear, 88T		500-sheet cassette on page 373
Gear, 88T		Optional 500-sheet feeder cassette on page 397
Grounding plate assembly	RM1-5461-000CN	Internal components (1 of 3) on page 359
Guard, edge		Internal components (1 of 3) on page 359
Guard, edge		Power supply assembly on page 371
Guide, cable		Optional 500-sheet paper feeder main body on page 393
Guide, cable, L		Multi-bin mailbox main body (1 of 2) on page 419
Guide, cable, L		Multi-bin mailbox main body (2 of 2) on page 423
Guide, cable, left		Fusing assembly on page 383
Guide, cable, right		Fusing assembly on page 383
Guide, cable, right front		Internal components (2 of 3) on page 363
Guide, cartridge, right		Internal components (3 of 3) on page 367
Guide, cassette left, rear		Internal components (1 of 3) on page 359
Guide, cassette left, rear		Optional 500-sheet paper feeder main body on page 393
Guide, cassette right, rear		Internal components (1 of 3) on page 359
Guide, cassette right, rear		Optional 500-sheet paper feeder main body on page 393
Guide, connecting cable	RC1-0386-000CN	Internal components (1 of 3) on page 359
Guide, crossmember		Multi-bin mailbox main body (1 of 2) on page 419
Guide, crossmember		Multi-bin mailbox main body (2 of 2) on page 423

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Guide, EPU, rear		Internal components (2 of 3) on page 363
Guide, flat flexible cable		Internal components (3 of 3) on page 367
Guide, front		Internal components (2 of 3) on page 363
Guide, gear		Internal components (1 of 3) on page 359
Guide, gear shift, A		Internal components (1 of 3) on page 359
Guide, gear shift, B		Internal components (1 of 3) on page 359
Guide, left		Internal components (3 of 3) on page 367
Guide, left		Optional 500-sheet paper feeder main body on page 393
Guide, left, upper		Internal components (3 of 3) on page 367
Guide, lower		Internal components (2 of 3) on page 363
Guide, nip		500-sheet cassette on page 373
Guide, nip		Optional 500-sheet feeder cassette on page 397
Guide, nip, center		Multipurpose pickup assembly on page 377
Guide, nip, left		Multipurpose pickup assembly on page 377
Guide, nip, right		Multipurpose pickup assembly on page 377
Guide, paper delivery		Paper delivery assembly on page 381
Guide, paper delivery guide, upper		Fusing assembly on page 383
Guide, paper delivery, lower		Fusing assembly on page 383
Guide, paper feed sensor cable		Optional 1,500-sheet feeder paper pickup assembly on page 413
Guide, paper inlet, lower		Fusing assembly on page 383
Guide, paper outlet		Optional 1,500-sheet feeder paper pickup assembly on page 413
Guide, paper set, front		Optional 1,500-sheet feeder main body (1 of 2) on page 405

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Guide, paper set, front		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Guide, paper set, left		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Guide, paper set, left		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Guide, paper set, right		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Guide, paper set, right		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Guide, rear		Internal components (3 of 3) on page 367
Guide, scanner cable		Internal components (1 of 3) on page 359
Hinge, multi, left		Multipurpose pickup assembly on page 377
Hinge, multi, right		Multipurpose pickup assembly on page 377
Holder, brush		Fusing assembly on page 383
Holder, check pin		Internal components (3 of 3) on page 367
Holder, connector		Power supply assembly on page 371
Holder, connector		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Holder, connector		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Holder, DCU		Internal components (3 of 3) on page 367
Holder, feed shaft		Optional 1,500-sheet feeder paper pickup assembly on page 413
Holder, fusing lever		Fusing assembly on page 383
Holder, fusing sensor		Fusing assembly on page 383
Holder, hinge shaft, lower		Optional 1,500-sheet feeder main body (1 of 2) on page 405

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Holder, hinge shaft, lower		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Holder, inlet		Power supply assembly on page 371
Holder, load limit arm		Optional 1,500-sheet feeder paper pickup assembly on page 413
Holder, paper feed sensor flag		Optional 1,500-sheet feeder paper pickup assembly on page 413
Holder, retard gear		500-sheet cassette on page 373
Holder, retard gear		Optional 500-sheet feeder cassette on page 397
Holder, sensor		Internal components (3 of 3) on page 367
Holder, sensor		Internal components (3 of 3) on page 367
Holder, sensor		Internal components (3 of 3) on page 367
Holder, separation		Multipurpose pickup assembly on page 377
Holder, sheet sensor		Internal components (2 of 3) on page 363
IC, photo interrupter	WG8-5624-000CN	Internal components (3 of 3) on page 367
IC, photo interrupter		Fusing assembly on page 383
IC, photo interrupter		Optional 1,500-sheet feeder paper pickup assembly on page 413
IN solenoid assembly		Multi-bin mailbox covers on page 417
Joint, left		Multi-bin mailbox covers on page 417
Joint, right		Multi-bin mailbox covers on page 417
Label, cassette operation		500-sheet cassette on page 373
Label, cassette operation		Optional 500-sheet feeder cassette on page 397
label, jam clear envelope		Multipurpose pickup assembly on page 377
Label, "Caution, high temp."		Fusing assembly on page 383

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Lack, paper end limit, upper		Optional 1,500-sheet feeder paper pickup assembly on page 413
Laser scanner assembly	RM1-5465-000CN	Internal components (2 of 3) on page 363
Latch, front cover, upper		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Latch, front cover, upper		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Latch, rear door		Multi-bin mailbox main body (1 of 2) on page 419
Latch, rear door		Multi-bin mailbox main body (2 of 2) on page 423
Left cover assembly		Multi-bin mailbox covers on page 417
Left cover assembly (P4014)	RM1-5450-000CN	Covers—base unit on page 357
Left cover assembly (P4015/P4515)	RM1-4551-000CN	Covers—base unit on page 357
Left frame assembly		Optional 500-sheet paper feeder main body on page 393
Left hook assembly		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Left hook assembly		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Left side end support assembly		500-sheet cassette on page 373
Left side end support assembly		Optional 500-sheet feeder cassette on page 397
Lever		Multipurpose pickup assembly on page 377
Lever, bin flapper		Multi-bin mailbox main body (1 of 2) on page 419
Lever, bin flapper		Multi-bin mailbox main body (2 of 2) on page 423
Lever, height prevention		Internal components (2 of 3) on page 363
Lever, in flapper link		Multi-bin mailbox covers on page 417
Lever, lens		Internal components (2 of 3) on page 363

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Lever, lock		Optional 500-sheet paper feeder main body on page 393
Lever, paper delivery sensor		Fusing assembly on page 383
Lever, release, left		Fusing assembly on page 383
Lever, release, right		Fusing assembly on page 383
Lever, sensor		Fusing assembly on page 383
Lid, scanner protective duct		Internal components (2 of 3) on page 363
Lifter drive assembly	RM1-4585-000CN	Internal components (3 of 3) on page 367
Lifter drive assembly	RM1-1136-000CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Lifter driver assembly		Optional 500-sheet paper feeder main body on page 393
Lifter tray assembly		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Lifter tray assembly		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Limiter, cassette torque	RC2-5262-000CN	500-sheet cassette on page 373
Limiter, cassette torque	RC2-5262-000CN	Optional 500-sheet feeder cassette on page 397
Limiter, cassette torque	RC2-5262-000CN	Optional 1,500-sheet feeder front door assembly on page 403
Limiter, multipurpose torque		Multipurpose pickup assembly on page 377
Lock side plate assembly		Optional 500-sheet paper feeder main body on page 393
Lower frame assembly		Optional 500-sheet paper feeder main body on page 393
Motor, DC, 24 V, drum drive	RL1-1659-000CN	Internal components (1 of 3) on page 359
Motor, DC, 24 V, main drive	RL1-1657-000CN	Internal components (2 of 3) on page 363
Motor, stepping	RH7-1603-020CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Mount, lever		Internal components (2 of 3) on page 363
Multi-bin mailbox PCA	RM1-6224-000CN	Multi-bin mailbox PCA on page 391

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Multi-bin mailbox PCA	RM1-6224-000CN	Multi-bin mailbox main body (2 of 2) on page 423
Multipurpose frame assembly		Multipurpose pickup assembly on page 377
Multipurpose guide assembly		Multipurpose pickup assembly on page 377
Multipurpose pickup assembly	RM1-4563-000CN	Multipurpose pickup assembly on page 377
Multipurpose pickup gear assembly		Multipurpose pickup assembly on page 377
Multipurpose solenoid assembly		Multipurpose pickup assembly on page 377
Multipurpose tray assembly		Multipurpose pickup assembly on page 377
Multipurpose tray kit (contains 1 pickup roller, 1 feed roller, 1 separation roller)	CB506-67905	Multipurpose pickup assembly on page 377
Multipurpose tray pickup assembly	RM1-4563-000CN	Internal components (1 of 3) on page 359
Numbering assembly	RM1-5265-000CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Oil damper assembly	RM1-0289-030CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Optional 1,500-sheet feeder front door assembly	RM1-5255-000CN	Optional 1,500-sheet feeder front door assembly on page 403
Optional 500-sheet feeder cassette	RM1-4559-000CN	Optional 500-sheet feeder cassette on page 397
Pad, arm		Multi-bin mailbox main body (1 of 2) on page 419
Pad, arm		Multi-bin mailbox main body (2 of 2) on page 423
Paper delivery assembly	RM1-4529-000CN	Paper delivery assembly on page 381
Paper delivery assembly (also see Figure 8-12 Paper delivery assembly on page 380)	RM1-4529-000CN	Internal components (3 of 3) on page 367
Paper delivery drive assembly	RM1-4526-000CN	Internal components (3 of 3) on page 367
Paper detect sensor assembly	RM1-5264-000CN	Optional 1,500-sheet feeder paper pickup assembly on page 413
Paper feed assembly	RM1-4548-000CN	Power supply assembly on page 371
Paper feed roller assembly	RM1-4527-000CN	Internal components (1 of 3) on page 359

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Paper feed roller assembly	RM1-0037-020CN	Internal components (2 of 3) on page 363
Paper feed roller assembly	RM1-0037-020CN	500-sheet cassette on page 373
Paper feed roller assembly	RM1-0037-020CN	Optional 500-sheet paper feeder main body on page 393
Paper feed roller assembly	RM1-0037-020CN	Optional 500-sheet feeder cassette on page 397
Paper feed roller assembly	RM1-0037-020CN	Optional 1,500-sheet feeder front door assembly on page 403
Paper feed roller assembly	RM1-0037-020CN	Optional 1,500-sheet feeder paper pickup assembly on page 413
Paper feed shaft Z assembly	RM1-4562-000CN	Internal components (2 of 3) on page 363
Paper pickup assembly (see Figure 8-23 Optional 1,500-sheet feeder paper pickup assembly on page 412)		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Paper pickup drive assembly	RM1-4532-000CN	Internal components (2 of 3) on page 363
Paper pickup drive assembly	RM1-5262-000CN	Optional 1,500-sheet feeder main body (1 of 2) on page 405
Paper pickup roller assembly	RM1-0036-020CN	Internal components (2 of 3) on page 363
Paper pickup roller assembly	RM1-0036-020CN	Optional 500-sheet paper feeder main body on page 393
Paper pickup roller assembly	RM1-0036-020CN	Optional 1,500-sheet feeder paper pickup assembly on page 413
Paper pickup side plate assembly		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Paper pickup side plate assembly		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Paper sensing flag assembly		Multi-bin mailbox main body (1 of 2) on page 419
Paper size detect assembly	RM1-5261-000CN	Optional 1,500-sheet feeder main body (2 of 2) on page 409
Pickup drive side plate		Optional 500-sheet paper feeder main body on page 393
Pin		Multi-bin mailbox main body (1 of 2) on page 419

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Pin		Multi-bin mailbox main body (2 of 2) on page 423
Pin, cassette lock, left		500-sheet cassette on page 373
Pin, dowel		500-sheet cassette on page 373
Pin, dowel		Optional 500-sheet feeder cassette on page 397
Pin, dowel		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Pin, dowel		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Pin, front guide lock, right		500-sheet cassette on page 373
Pin, front guide lock, right		Optional 500-sheet feeder cassette on page 397
Pin, lifter tray stopper		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Pin, lifter tray stopper		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Pin, option	RC1-0306-000CN	Covers—base unit on page 357
Plate, damper support		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Plate, damper support		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Plate, front upper		Optional 1,500-sheet feeder paper pickup assembly on page 413
Plate, lifter wire cover		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Plate, lifter wire cover		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Plate, paper lifting		500-sheet cassette on page 373
Plate, paper lifting		Optional 500-sheet feeder cassette on page 397
Plate, pressure, left		Fusing assembly on page 383

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Plate, pressure, right		Fusing assembly on page 383
Plate, reinforcement		Optional 500-sheet paper feeder main body on page 393
Plate, RW crossmember		Internal components (2 of 3) on page 363
Plate, swing		Optional 1,500-sheet feeder paper pickup assembly on page 413
Power-supply assembly, 110-127 V (see Figure 8-9 Power supply assembly on page 370)		Internal components (1 of 3) on page 359
Power-supply assembly, 220-240 V (see Figure 8-9 Power supply assembly on page 370)		Internal components (1 of 3) on page 359
Presence sensor holder assembly		Multipurpose pickup assembly on page 377
Pressure roller gear assembly		Fusing assembly on page 383
Product roller kit (contains 2 feed rollers, 1 pickup roller)	CB506-67904	Optional 500-sheet paper feeder main body on page 393
Product roller kit (contains 2 feed rollers, 1 pickup roller)	CB506-67904	Optional 500-sheet feeder cassette on page 397
Product roller kit (contains 2 feed rollers, 1 pickup roller)	CB506-67904	Optional 1,500-sheet feeder paper pickup assembly on page 413
Pulley, 24T		Multi-bin mailbox main body (1 of 2) on page 419
Pulley, 24T		Multi-bin mailbox main body (1 of 2) on page 419
Pulley, 24T		Multi-bin mailbox main body (2 of 2) on page 423
Pulley, 24T		Multi-bin mailbox main body (2 of 2) on page 423
Pulley, wire, front		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Pulley, wire, front		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Pulley, wire, rear		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Pulley, wire, rear		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Pulley/Gear, 34T		Multi-bin mailbox main body (1 of 2) on page 419
Pulley/Gear, 34T		Multi-bin mailbox main body (2 of 2) on page 423

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Rear door assembly		Multi-bin mailbox covers on page 417
Reel, lifter wire		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Reel, lifter wire		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Registration assembly	RM1-5460-000CN	Internal components (1 of 3) on page 359
Remnant indication assembly	RM1-5259-000CN	Optional 1,500-sheet feeder main body (2 of 2) on page 409
Rib, cable guide		Fusing assembly on page 383
Right cover assembly		Multi-bin mailbox covers on page 417
Right cover assembly (P4014)	RM1-5449-000CN	Covers—base unit on page 357
Right cover assembly (P4015/P4515)	RM1-4550-000CN	Covers—base unit on page 357
Right frame assembly		Optional 500-sheet paper feeder main body on page 393
Right front guide assembly	RM1-4576-000CN	Internal components (2 of 3) on page 363
Right front guide assembly		Optional 500-sheet paper feeder main body on page 393
Right guide assembly		Optional 500-sheet paper feeder main body on page 393
Right guide assembly (P4014)	RM1-5451-000CN	Internal components (3 of 3) on page 367
Right guide assembly (P4015/P4515)	RM1-4558-000CN	Internal components (3 of 3) on page 367
Right side end support assembly		500-sheet cassette on page 373
Right side end support assembly		Optional 500-sheet feeder cassette on page 397
Right stopper assembly		Internal components (2 of 3) on page 363
Ring, E	XD9-0232-000CN	Internal components (2 of 3) on page 363
Ring, E		500-sheet cassette on page 373
Ring, E		Multipurpose pickup assembly on page 377

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Ring, E		Paper delivery assembly on page 381
Ring, E		Fusing assembly on page 383
Ring, E		Optional 500-sheet paper feeder main body on page 393
Ring, E		Optional 500-sheet paper feeder main body on page 393
Ring, E		Optional 500-sheet feeder cassette on page 397
Ring, E		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Ring, E		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Ring, E		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Ring, E		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Ring, E		Optional 1,500-sheet feeder paper pickup assembly on page 413
Ring, E		Multi-bin mailbox main body (1 of 2) on page 419
Ring, E		Multi-bin mailbox main body (2 of 2) on page 423
Ring, retainer		Optional 1,500-sheet feeder paper pickup assembly on page 413
Ring, slider		Optional 1,500-sheet feeder paper pickup assembly on page 413
Rod, din board		Internal components (3 of 3) on page 367
Rod, release, lower		Internal components (1 of 3) on page 359
Rod, release, upper		Internal components (1 of 3) on page 359
Rod, switch	RC2-2667-000CN	Internal components (2 of 3) on page 363
Rod, third fan		Internal components (3 of 3) on page 367
Roller, delivery intermediate		Paper delivery assembly on page 381

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Roller, delivery, inlet		Multi-bin mailbox main body (1 of 2) on page 419
Roller, delivery, inlet		Multi-bin mailbox main body (2 of 2) on page 423
Roller, face-down, lower		Paper delivery assembly on page 381
Roller, face-down, upper		Paper delivery assembly on page 381
Roller, face-up		Fusing assembly on page 383
Roller, feed	RL1-1663-000CN	Multipurpose pickup assembly on page 377
Roller, intermediate		Multi-bin mailbox main body (1 of 2) on page 419
Roller, intermediate		Multi-bin mailbox main body (2 of 2) on page 423
Roller, LU		500-sheet cassette on page 373
Roller, LU		Optional 500-sheet feeder cassette on page 397
Roller, paper feed		Optional 1,500-sheet feeder paper pickup assembly on page 413
Roller, paper feed		Optional 1,500-sheet feeder paper pickup assembly on page 413
Roller, pickup	RL1-1641-000CN	Multipurpose pickup assembly on page 377
Roller, positioning		500-sheet cassette on page 373
Roller, positioning		Optional 500-sheet feeder cassette on page 397
Roller, pressure		Fusing assembly on page 383
Roller, RD		500-sheet cassette on page 373
Roller, RD		Optional 500-sheet feeder cassette on page 397
Roller, separation	RL1-1654-000CN	Multipurpose pickup assembly on page 377
Saddle, wire		Internal components (2 of 3) on page 363
Saddle, wire		Optional 1,500-sheet feeder main body (1 of 2) on page 405

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Saddle, wire		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Screw with washer, M3x6		Fusing assembly on page 383
Screw with washer, M3x6		Fusing assembly on page 383
Screw, D, M3x8		Covers—base unit on page 357
Screw, D, M3x8	XA9-1671-000CN	Internal components (1 of 3) on page 359
Screw, D, M3x8		Internal components (2 of 3) on page 363
Screw, D, M3x8		Internal components (3 of 3) on page 367
Screw, D, M3x8		Power supply assembly on page 371
Screw, D, M3x8		Multipurpose pickup assembly on page 377
Screw, D, M3x8		Fusing assembly on page 383
Screw, D, M3x8		Optional 500-sheet paper feeder main body on page 393
Screw, D, M3x8		Multi-bin mailbox main body (1 of 2) on page 419
Screw, D, M3x8		Multi-bin mailbox main body (2 of 2) on page 423
Screw, flat head RS, M3x6	XA9-1464-000CN	Power supply assembly on page 371
Screw, M3x8		Fusing assembly on page 383
Screw, M4x5		Internal components (1 of 3) on page 359
Screw, machine, pan head, M3x6	XB1-1300-605CN	Power supply assembly on page 371
Screw, machine, truss head, M3x4		Multi-bin mailbox main body (1 of 2) on page 419
Screw, machine, truss head, M3x4		Multi-bin mailbox main body (2 of 2) on page 423
Screw, P, M3x8		Multi-bin mailbox covers on page 417
Screw, RS, M3x8		Fusing assembly on page 383
Screw, stepped		Fusing assembly on page 383
Screw, tap, binding head, M3x8	XB4-7300-809CN	Internal components (2 of 3) on page 363
Screw, tap, binding head, M3x8		Multi-bin mailbox covers on page 417

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Screw, tap, binding head, M3x8		Multi-bin mailbox main body (1 of 2) on page 419
Screw, tap, binding head, M3x8		Multi-bin mailbox main body (2 of 2) on page 423
Screw, tap, M3x6	XA9-1503-000CN	Internal components (1 of 3) on page 359
Screw, tap, M3x6		Internal components (2 of 3) on page 363
Screw, tap, M3x6		Internal components (3 of 3) on page 367
Screw, tap, M3x6		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Screw, tap, M3x6		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Screw, tap, M3x6		Optional 1,500-sheet feeder paper pickup assembly on page 413
screw, tap, M3x6		Optional 500-sheet paper feeder main body on page 393
Screw, tap, M4x12		500-sheet cassette on page 373
Screw, tap, M4x12		Optional 500-sheet feeder cassette on page 397
Screw, tap, pan head, M4x10		Internal components (2 of 3) on page 363
Screw, tap, pan head, M4x10		Internal components (3 of 3) on page 367
Screw, tap, pan head, M4x10		Power supply assembly on page 371
Screw, tap, pan head, M4x10		500-sheet cassette on page 373
Screw, tap, pan head, M4x10		Multipurpose pickup assembly on page 377
Screw, tap, pan head, M4x10		Optional 500-sheet paper feeder main body on page 393
Screw, tap, pan head, M4x10		Optional 500-sheet feeder cassette on page 397
Screw, tap, pan head, M4x10	XB4-7401-007CN	Optional 1,500-sheet paper feeder covers on page 401
Screw, tap, pan head, MM4x10		Multi-bin mailbox main body (1 of 2) on page 419
Screw, tap, pan head, MM4x10		Multi-bin mailbox main body (2 of 2) on page 423

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Screw, tap, S		Fusing assembly on page 383
Screw, tapping, pan head, M4x10		Covers—base unit on page 357
Screw, tapping, pan head, M4x10	XB4-7401-007CN	Internal components (1 of 3) on page 359
Screw, with washer, M3x6	XB2-7300-607CN	Internal components (3 of 3) on page 367
Screw, with washer, M3x6		Power supply assembly on page 371
Screw, with washer, M3x6		Optional 500-sheet paper feeder main body on page 393
Screw, with washer, M3x6		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Screw, with washer, M3x6		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Screw, with washer, M3x8	XA9-1420-000CN	Optional 1,500-sheet paper feeder covers on page 401
Screw, with washer, M3x8		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Screw, with washer, M3x8		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Screw, with washer, M4x6	XB2-7400-606CN	Power supply assembly on page 371
Sensor assembly	RM1-5096-000CN	Multi-bin mailbox main body (2 of 2) on page 423
Shaft, front cover hinge		Optional 1,500-sheet paper feeder covers on page 401
Shaft, lifter drive		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Shaft, lifter drive		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Shaft, load limit arm		Optional 1,500-sheet feeder paper pickup assembly on page 413
Shaft, lock joint		Optional 500-sheet paper feeder main body on page 393
Shaft, multipurpose cam, left		Multipurpose pickup assembly on page 377
Shaft, multipurpose cam, right		Multipurpose pickup assembly on page 377

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Shaft, paper feed roller		Optional 1,500-sheet feeder paper pickup assembly on page 413
Shaft, positioning roller auxiliary		500-sheet cassette on page 373
Shaft, positioning roller, auxiliary		Optional 500-sheet feeder cassette on page 397
Shaft, RD roller		500-sheet cassette on page 373
Shaft, retard drive	RL1-1658-000CN	Internal components (2 of 3) on page 363
Shaft, retard drive		Optional 500-sheet paper feeder main body on page 393
Shaft, retard gear holder		500-sheet cassette on page 373
Shaft, retard gear holder		Optional 500-sheet feeder cassette on page 397
Shaft, size sensing		500-sheet cassette on page 373
Shaft, size sensing		Multipurpose pickup assembly on page 377
Shaft, size sensing		Optional 500-sheet feeder cassette on page 397
Sheet, bottom frame, left		Multi-bin mailbox main body (1 of 2) on page 419
Sheet, bottom frame, left		Multi-bin mailbox main body (2 of 2) on page 423
Sheet, bottom frame, right		Multi-bin mailbox main body (1 of 2) on page 419
Sheet, bottom frame, right		Multi-bin mailbox main body (2 of 2) on page 423
Sheet, fusing protective		Fusing assembly on page 383
Sheet, protective, left		Fusing assembly on page 383
Sheet, protective, right lower		Fusing assembly on page 383
Sheet, protective, right upper		Fusing assembly on page 383
Sheet, solenoid damper		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Sheet, solenoid damper		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Side plate, drum drive		Internal components (1 of 3) on page 359

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Side plate, fuser drive		Internal components (3 of 3) on page 367
Side plate, fusing, left		Fusing assembly on page 383
Side plate, fusing, right		Fusing assembly on page 383
Side plate, paper feed drive		Internal components (2 of 3) on page 363
Size detect assembly	RM1-4525-000CN	Internal components (1 of 3) on page 359
Size detect assembly		Optional 500-sheet paper feeder main body on page 393
Sleeve guide assembly (110-127 V)		Fusing assembly on page 383
Sleeve guide assembly (220-240 V)		Fusing assembly on page 383
Solenoid	RK2-0270-000CN	Internal components (2 of 3) on page 363
Solenoid		Optional 500-sheet paper feeder main body on page 393
Solenoid		Multi-bin mailbox main body (1 of 2) on page 419
Spacer		Multi-bin mailbox main body (1 of 2) on page 419
Spacer		Multi-bin mailbox main body (2 of 2) on page 423
Spacer, frame		Internal components (1 of 3) on page 359
Spacer, scanner, front		Internal components (2 of 3) on page 363
Spacer, scanner, rear		Internal components (2 of 3) on page 363
Spacer, screw		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Spacer, screw		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Spring, compression		Internal components (1 of 3) on page 359
Spring, compression	RC1-0213-000CN	Internal components (2 of 3) on page 363
Spring, compression		Multipurpose pickup assembly on page 377
Spring, compression		Fusing assembly on page 383
Spring, compression		Optional 1,500-sheet feeder paper pickup assembly on page 413

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Spring, compression		Optional 1,500-sheet feeder paper pickup assembly on page 413
Spring, compression		Optional 1,500-sheet feeder paper pickup assembly on page 413
Spring, compression		Multi-bin mailbox main body (1 of 2) on page 419
Spring, compression		Multi-bin mailbox main body (1 of 2) on page 419
Spring, compression		Multi-bin mailbox main body (2 of 2) on page 423
Spring, compression		Multi-bin mailbox main body (2 of 2) on page 423
Spring, grounding		Internal components (3 of 3) on page 367
Spring, grounding	RU6-2105-000CN	Paper delivery assembly on page 381
Spring, grounding		Paper delivery assembly on page 381
Spring, leaf		Power supply assembly on page 371
Spring, leaf		Fusing assembly on page 383
Spring, tension	RU6-2115-000CN	Internal components (2 of 3) on page 363
Spring, tension	RC1-0198-000CN	Internal components (3 of 3) on page 367
Spring, tension		500-sheet cassette on page 373
Spring, tension		500-sheet cassette on page 373
Spring, tension		Multipurpose pickup assembly on page 377
Spring, tension		Multipurpose pickup assembly on page 377
Spring, tension		Multipurpose pickup assembly on page 377
Spring, tension	RC1-0133-000CN	Paper delivery assembly on page 381
Spring, tension		Optional 500-sheet paper feeder main body on page 393
Spring, tension		Optional 500-sheet paper feeder main body on page 393
Spring, tension		Optional 500-sheet feeder cassette on page 397

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Spring, tension		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Spring, tension		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Spring, tension		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Spring, tension		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Spring, tension		Multi-bin mailbox main body (1 of 2) on page 419
Spring, tension		Multi-bin mailbox main body (2 of 2) on page 423
Spring, torsion		Internal components (2 of 3) on page 363
Spring, torsion		Internal components (2 of 3) on page 363
Spring, torsion		500-sheet cassette on page 373
Spring, torsion		Fusing assembly on page 383
Spring, torsion		Fusing assembly on page 383
Spring, torsion		Fusing assembly on page 383
Spring, torsion		Fusing assembly on page 383
Spring, torsion		Optional 500-sheet feeder cassette on page 397
Spring, torsion		Optional 500-sheet feeder cassette on page 397
Spring, torsion		Optional 1,500-sheet paper feeder covers on page 401
Spring, torsion		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Spring, torsion		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Spring, torsion		Optional 1,500-sheet feeder paper pickup assembly on page 413
Stopper, C left (P4014)		Internal components (2 of 3) on page 363
Stopper, C left (P4015/P4515)		Internal components (2 of 3) on page 363

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Stopper, C right (P4014)		Internal components (2 of 3) on page 363
Stopper, C right (P4015/P4515)		Internal components (2 of 3) on page 363
Stopper, front door		Optional 1,500-sheet paper feeder covers on page 401
Stopper, rear door		Multi-bin mailbox main body (1 of 2) on page 419
Stopper, rear door		Multi-bin mailbox main body (2 of 2) on page 423
Support, DCU		Internal components (2 of 3) on page 363
Support, feed bushing		Optional 1,500-sheet feeder paper pickup assembly on page 413
Support, lifter arm		500-sheet cassette on page 373
Support, lifter arm		Optional 500-sheet feeder cassette on page 397
Support, lifter drive assembly		Internal components (3 of 3) on page 367
Support, lifter drive assembly		Optional 500-sheet paper feeder main body on page 393
Support, power supply switch		Internal components (1 of 3) on page 359
Support, release hook, left		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Support, release hook, left		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Support, wire pulley		Optional 1,500-sheet feeder main body (1 of 2) on page 405
Support, wire pulley		Optional 1,500-sheet feeder main body (2 of 2) on page 409
Tag holder assembly	RM1-4539-000CN	Internal components (2 of 3) on page 363
Thermistor unit	RK2-0359-000CN	Internal components (3 of 3) on page 367
Top bin flapper assembly		Multi-bin mailbox main body (1 of 2) on page 419
Top cover assembly (P4014)	RM1-5250-000CN	Covers—base unit on page 357

Table 8-26 Alphabetical parts list (continued)

Description	Part number	Table and page
Top cover assembly (P4015/P4515)	RM1-4552-000CN	Covers—base unit on page 357
Transfer roller assembly	CB506-67903	Internal components (1 of 3) on page 359
Upper entrance guide assembly		Fusing assembly on page 383
Upper plate, rear		Optional 500-sheet paper feeder main body on page 393
Upper plate, right		Optional 500-sheet paper feeder main body on page 393

Numerical parts list

Table 8-27 Numerical parts list

Part number	Description	Table and page
	Screw, tapping, pan head, M4x10	Covers—base unit on page 357
	Screw, D, M3x8	Covers—base unit on page 357
	Screw, M4x5	Internal components (1 of 3) on page 359
	Power-supply assembly, 110-127 V (see Figure 8-9 Power supply assembly on page 370)	Internal components (1 of 3) on page 359
	Power-supply assembly, 220-240 V (see Figure 8-9 Power supply assembly on page 370)	Internal components (1 of 3) on page 359
	Gear, 193T	Internal components (1 of 3) on page 359
	Guard, edge	Internal components (1 of 3) on page 359
	Clamp, cord	Internal components (1 of 3) on page 359
	Rod, release, upper	Internal components (1 of 3) on page 359
	Rod, release, lower	Internal components (1 of 3) on page 359
	Guide, gear shift, A	Internal components (1 of 3) on page 359
	Guide, gear shift, B	Internal components (1 of 3) on page 359
	Guide, scanner cable	Internal components (1 of 3) on page 359
	Guide, gear	Internal components (1 of 3) on page 359
	Guide, cassette right, rear	Internal components (1 of 3) on page 359
	Guide, cassette left, rear	Internal components (1 of 3) on page 359
	Support, power supply switch	Internal components (1 of 3) on page 359
	Foot	Internal components (1 of 3) on page 359
	Spacer, frame	Internal components (1 of 3) on page 359
	Side plate, drum drive	Internal components (1 of 3) on page 359
	Cap, drum gear	Internal components (1 of 3) on page 359

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Bushing	Internal components (1 of 3) on page 359
	Spring, compression	Internal components (1 of 3) on page 359
	Feeder sensor cable assembly	Internal components (2 of 3) on page 363
	Screw, tap, pan head, M4x10	Internal components (2 of 3) on page 363
	Screw, D, M3x8	Internal components (2 of 3) on page 363
	Spacer, scanner, front	Internal components (2 of 3) on page 363
	Spacer, scanner, rear	Internal components (2 of 3) on page 363
	Screw, tap, M3x6	Internal components (2 of 3) on page 363
	Guide, front	Internal components (2 of 3) on page 363
	Support, DCU	Internal components (2 of 3) on page 363
	Bushing	Internal components (2 of 3) on page 363
	Guide, cable, right front	Internal components (2 of 3) on page 363
	Lever, height prevention	Internal components (2 of 3) on page 363
	Holder, sheet sensor	Internal components (2 of 3) on page 363
	Guide, EPU, rear	Internal components (2 of 3) on page 363
	Clip, cable	Internal components (2 of 3) on page 363
	Saddle, wire	Internal components (2 of 3) on page 363
	Guide, lower	Internal components (2 of 3) on page 363
	Duct, scanner protective, 1	Internal components (2 of 3) on page 363
	Flag, shutter	Internal components (2 of 3) on page 363
	Spring, torsion	Internal components (2 of 3) on page 363
	Plate, RW crossmember	Internal components (2 of 3) on page 363

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Lever, lens	Internal components (2 of 3) on page 363
	Stopper, C right (P4015/P4515)	Internal components (2 of 3) on page 363
	Stopper, C right (P4014)	Internal components (2 of 3) on page 363
	Stopper, C left (P4015/P4515)	Internal components (2 of 3) on page 363
	Stopper, C left (P4014)	Internal components (2 of 3) on page 363
	Mount, lever	Internal components (2 of 3) on page 363
	Right stopper assembly	Internal components (2 of 3) on page 363
	Side plate, paper feed drive	Internal components (2 of 3) on page 363
	Gear, 29T	Internal components (2 of 3) on page 363
	Gear, 35T	Internal components (2 of 3) on page 363
	Gear, 37T/18T	Internal components (2 of 3) on page 363
	Gear, 17T/25T	Internal components (2 of 3) on page 363
	Spring, torsion	Internal components (2 of 3) on page 363
	Flag, paper presence detect	Internal components (2 of 3) on page 363
	Lid, scanner protective duct	Internal components (2 of 3) on page 363
	Duct, scanner protective, 2	Internal components (2 of 3) on page 363
	Support, lifter drive assembly	Internal components (3 of 3) on page 367
	Cover, connector	Internal components (3 of 3) on page 367
	Case, envelope	Internal components (3 of 3) on page 367
	Holder, sensor	Internal components (3 of 3) on page 367
	Front cassette LF guide assembly	Internal components (3 of 3) on page 367
	Screw, tap, pan head, M4x10	Internal components (3 of 3) on page 367

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Screw, D, M3x8	Internal components (3 of 3) on page 367
	Holder, sensor	Internal components (3 of 3) on page 367
	Guide, cartridge, right	Internal components (3 of 3) on page 367
	Rod, third fan	Internal components (3 of 3) on page 367
	Crossmember, front	Internal components (3 of 3) on page 367
	Crossmember, option, left	Internal components (3 of 3) on page 367
	Guide, rear	Internal components (3 of 3) on page 367
	Duct, second fan	Internal components (3 of 3) on page 367
	Duct, fourth fan	Internal components (3 of 3) on page 367
	Holder, DCU	Internal components (3 of 3) on page 367
	Guide, flat flexible cable	Internal components (3 of 3) on page 367
	Holder, check pin	Internal components (3 of 3) on page 367
	Spring, grounding	Internal components (3 of 3) on page 367
	Guide, left	Internal components (3 of 3) on page 367
	Guide, left, upper	Internal components (3 of 3) on page 367
	Holder, sensor	Internal components (3 of 3) on page 367
	Rod, din board	Internal components (3 of 3) on page 367
	Gear, 23T/19T	Internal components (3 of 3) on page 367
	Crossmember, option, right	Internal components (3 of 3) on page 367
	Side plate, fuser drive	Internal components (3 of 3) on page 367
	Gear, 17T	Internal components (3 of 3) on page 367
	Gear, 15T	Internal components (3 of 3) on page 367

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Gear, 25T/91T	Internal components (3 of 3) on page 367
	Gear, 33T	Internal components (3 of 3) on page 367
	Gear 35T	Internal components (3 of 3) on page 367
	Cable, option feeder	Internal components (3 of 3) on page 367
	Cable, OPT DEL	Internal components (3 of 3) on page 367
	Clamp, cable	Internal components (3 of 3) on page 367
	Screw, tap, M3x6	Internal components (3 of 3) on page 367
	Holder, inlet	Power supply assembly on page 371
	Holder, connector	Power supply assembly on page 371
	Guard, edge	Power supply assembly on page 371
	Spring, leaf	Power supply assembly on page 371
	Crossmember, fusing	Power supply assembly on page 371
	Screw, tap, pan head, M4x10	Power supply assembly on page 371
	Screw, D, M3x8	Power supply assembly on page 371
	Screw, with washer, M3x6	Power supply assembly on page 371
	Pin, front guide lock, right	500-sheet cassette on page 373
	Cover, gear	500-sheet cassette on page 373
	Flag, size sensing	500-sheet cassette on page 373
	Arm, lifter	500-sheet cassette on page 373
	Support, lifter arm	500-sheet cassette on page 373
	Bushing, lift arm	500-sheet cassette on page 373
	Holder, retard gear	500-sheet cassette on page 373

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Spring, tension	500-sheet cassette on page 373
	Spring, tension	500-sheet cassette on page 373
	Gear, 20T	500-sheet cassette on page 373
	Body, cassette	500-sheet cassette on page 373
	Roller, positioning	500-sheet cassette on page 373
	Claw, cassette	500-sheet cassette on page 373
	Roller, LU	500-sheet cassette on page 373
	Flange, positioning roller, right	500-sheet cassette on page 373
	Shaft, positioning roller auxiliary	500-sheet cassette on page 373
	Roller, RD	500-sheet cassette on page 373
	Gauge, fuel	500-sheet cassette on page 373
	Pin, cassette lock, left	500-sheet cassette on page 373
	Shaft, RD roller	500-sheet cassette on page 373
	Spring, torsion	500-sheet cassette on page 373
	Guide, nip	500-sheet cassette on page 373
	Plate, paper lifting	500-sheet cassette on page 373
	Gear, 88T	500-sheet cassette on page 373
	Gear, 14T	500-sheet cassette on page 373
	Gear, 14T	500-sheet cassette on page 373
	Gear, 14T	500-sheet cassette on page 373
	Gear, 15T/25T	500-sheet cassette on page 373
	Gear, 37T	500-sheet cassette on page 373

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Shaft, size sensing	500-sheet cassette on page 373
	Shaft, retard gear holder	500-sheet cassette on page 373
	Ring, E	500-sheet cassette on page 373
	Label, cassette operation	500-sheet cassette on page 373
	Right side end support assembly	500-sheet cassette on page 373
	Cassette rear assembly	500-sheet cassette on page 373
	Left side end support assembly	500-sheet cassette on page 373
	Front cassette assembly	500-sheet cassette on page 373
	Screw, tap, pan head, M4x10	500-sheet cassette on page 373
	Pin, dowel	500-sheet cassette on page 373
	Screw, tap, M4x12	500-sheet cassette on page 373
	Frame, multi, right	Multipurpose pickup assembly on page 377
	Guide, nip, left	Multipurpose pickup assembly on page 377
	Guide, nip, center	Multipurpose pickup assembly on page 377
	Guide, nip, right	Multipurpose pickup assembly on page 377
	Bushing	Multipurpose pickup assembly on page 377
	Bushing	Multipurpose pickup assembly on page 377
	Bushing	Multipurpose pickup assembly on page 377
	Bushing	Multipurpose pickup assembly on page 377
	Shaft, size sensing	Multipurpose pickup assembly on page 377
	Hinge, multi, left	Multipurpose pickup assembly on page 377
	Hinge, multi, right	Multipurpose pickup assembly on page 377

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	label, jam clear envelope	Multipurpose pickup assembly on page 377
	Cam	Multipurpose pickup assembly on page 377
	Lever	Multipurpose pickup assembly on page 377
	Shaft, multipurpose cam, left	Multipurpose pickup assembly on page 377
	Shaft, multipurpose cam, right	Multipurpose pickup assembly on page 377
	Cover, multipurpose spring, left	Multipurpose pickup assembly on page 377
	Cover, multipurpose spring, right	Multipurpose pickup assembly on page 377
	Gear, 15T/21T	Multipurpose pickup assembly on page 377
	Gear, 30T/34T	Multipurpose pickup assembly on page 377
	Gear, 30T	Multipurpose pickup assembly on page 377
	Cam/gear, 30T	Multipurpose pickup assembly on page 377
	Cam/gear, 30T	Multipurpose pickup assembly on page 377
	Gear, 14T	Multipurpose pickup assembly on page 377
	Spring, tension	Multipurpose pickup assembly on page 377
	Spring, compression	Multipurpose pickup assembly on page 377
	Spring, tension	Multipurpose pickup assembly on page 377
	Spring, tension	Multipurpose pickup assembly on page 377
	Multipurpose guide assembly	Multipurpose pickup assembly on page 377
	Presence sensor holder assembly	Multipurpose pickup assembly on page 377
	Multipurpose pickup gear assembly	Multipurpose pickup assembly on page 377
	Multipurpose frame assembly	Multipurpose pickup assembly on page 377
	Multipurpose tray assembly	Multipurpose pickup assembly on page 377

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Cable, multipurpose sensor	Multipurpose pickup assembly on page 377
	Limiter, multipurpose torque	Multipurpose pickup assembly on page 377
	Holder, separation	Multipurpose pickup assembly on page 377
	Screw, D, M3x8	Multipurpose pickup assembly on page 377
	Screw, tap, pan head, M4x10	Multipurpose pickup assembly on page 377
	Cover, roller	Multipurpose pickup assembly on page 377
	Ring, E	Multipurpose pickup assembly on page 377
	Multipurpose solenoid assembly	Multipurpose pickup assembly on page 377
	Roller, face-down, upper	Paper delivery assembly on page 381
	Deflector, delivery	Paper delivery assembly on page 381
	Ring, E	Paper delivery assembly on page 381
	Bushing, paper delivery, upper	Paper delivery assembly on page 381
	Bushing	Paper delivery assembly on page 381
	Spring, grounding	Paper delivery assembly on page 381
	Bushing, paper delivery, upper	Paper delivery assembly on page 381
	Frame, face-down	Paper delivery assembly on page 381
	Bushing	Paper delivery assembly on page 381
	Bushing	Paper delivery assembly on page 381
	Guide, paper delivery	Paper delivery assembly on page 381
	Flange, positioning roller, right	Paper delivery assembly on page 381
	Roller, delivery intermediate	Paper delivery assembly on page 381
	Roller, face-down, lower	Paper delivery assembly on page 381

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Gear, 21T	Paper delivery assembly on page 381
	Gear, 17T	Paper delivery assembly on page 381
	Gear, 20T	Paper delivery assembly on page 381
	Gear, 33T	Paper delivery assembly on page 381
	Gear, 18T	Paper delivery assembly on page 381
	Roller, pressure	Fusing assembly on page 383
	Sleeve guide assembly (110-127 V)	Fusing assembly on page 383
	Sleeve guide assembly (220-240 V)	Fusing assembly on page 383
	Guide, paper inlet, lower	Fusing assembly on page 383
	Holder, fusing sensor	Fusing assembly on page 383
	Lever, release, left	Fusing assembly on page 383
	Sheet, fusing protective	Fusing assembly on page 383
	Bushing	Fusing assembly on page 383
	Roller, face-up	Fusing assembly on page 383
	Spring, torsion	Fusing assembly on page 383
	Spring, torsion	Fusing assembly on page 383
	Side plate, fusing, left	Fusing assembly on page 383
	Spring, compression	Fusing assembly on page 383
	Plate, pressure, right	Fusing assembly on page 383
	Plate, pressure, left	Fusing assembly on page 383
	Bushing	Fusing assembly on page 383
	Bushing	Fusing assembly on page 383
	Flag, sensor, right	Fusing assembly on page 383
	Flag, sensor, left	Fusing assembly on page 383
	Lever, sensor	Fusing assembly on page 383
	Spring, torsion	Fusing assembly on page 383
	Spring, torsion	Fusing assembly on page 383
	Guide, cable, right	Fusing assembly on page 383
	Guide, cable, left	Fusing assembly on page 383
	Spring, leaf	Fusing assembly on page 383
	Bar, filter, rear	Fusing assembly on page 383

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Eliminator	Fusing assembly on page 383
	Holder, brush	Fusing assembly on page 383
	Rib, cable guide	Fusing assembly on page 383
	Cam	Fusing assembly on page 383
	Sheet, protective, right upper	Fusing assembly on page 383
	Sheet, protective, right lower	Fusing assembly on page 383
	Side plate, fusing, right	Fusing assembly on page 383
	Lever, release, right	Fusing assembly on page 383
	Guide, paper delivery, lower	Fusing assembly on page 383
	Screw, stepped	Fusing assembly on page 383
	Sheet, protective, left	Fusing assembly on page 383
	Gear, 18T	Fusing assembly on page 383
	Gear, 17T	Fusing assembly on page 383
	IC, photo interrupter	Fusing assembly on page 383
	Guide, paper delivery guide, upper	Fusing assembly on page 383
	Pressure roller gear assembly	Fusing assembly on page 383
	Upper entrance guide assembly	Fusing assembly on page 383
	Cable, FSR AC	Fusing assembly on page 383
	Cable, FSR DC	Fusing assembly on page 383
	Holder, fusing lever	Fusing assembly on page 383
	Screw, M3x8	Fusing assembly on page 383
	Screw, RS, M3x8	Fusing assembly on page 383
	Screw, D, M3x8	Fusing assembly on page 383
	Screw with washer, M3x6	Fusing assembly on page 383
	Screw with washer, M3x6	Fusing assembly on page 383
	Screw, tap, S	Fusing assembly on page 383
	Ring, E	Fusing assembly on page 383
	Lever, paper delivery sensor	Fusing assembly on page 383
	Label, "Caution, high temp."	Fusing assembly on page 383
	Solenoid	Optional 500-sheet paper feeder main body on page 393
	Size detect assembly	Optional 500-sheet paper feeder main body on page 393
	Front top plate assembly	Optional 500-sheet paper feeder main body on page 393

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Cable, interface, upper	Optional 500-sheet paper feeder main body on page 393
	Pickup drive side plate	Optional 500-sheet paper feeder main body on page 393
	Cable, size sensor	Optional 500-sheet paper feeder main body on page 393
	500-page feeder driver PCA	Optional 500-sheet paper feeder main body on page 393
	Connector, drawer, 6P	Optional 500-sheet paper feeder main body on page 393
	Lifter driver assembly	Optional 500-sheet paper feeder main body on page 393
	Spring, tension	Optional 500-sheet paper feeder main body on page 393
	Support, lifter drive assembly	Optional 500-sheet paper feeder main body on page 393
	Bushing	Optional 500-sheet paper feeder main body on page 393
	Guide, cassette right, rear	Optional 500-sheet paper feeder main body on page 393
	Guide, cassette left, rear	Optional 500-sheet paper feeder main body on page 393
	Plate, reinforcement	Optional 500-sheet paper feeder main body on page 393
	Guide, left	Optional 500-sheet paper feeder main body on page 393
	Guide, cable	Optional 500-sheet paper feeder main body on page 393
	Shaft, lock joint	Optional 500-sheet paper feeder main body on page 393
	Arm, lock	Optional 500-sheet paper feeder main body on page 393
	Lever, lock	Optional 500-sheet paper feeder main body on page 393
	Upper plate, rear	Optional 500-sheet paper feeder main body on page 393
	Upper plate, right	Optional 500-sheet paper feeder main body on page 393
	Shaft, retard drive	Optional 500-sheet paper feeder main body on page 393
	Gear, 23T	Optional 500-sheet paper feeder main body on page 393
	Gear, 14T	Optional 500-sheet paper feeder main body on page 393

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Gear, 16T	Optional 500-sheet paper feeder main body on page 393
	Spring, tension	Optional 500-sheet paper feeder main body on page 393
	Left frame assembly	Optional 500-sheet paper feeder main body on page 393
	Right frame assembly	Optional 500-sheet paper feeder main body on page 393
	Front cassette left guide assembly	Optional 500-sheet paper feeder main body on page 393
	Lower frame assembly	Optional 500-sheet paper feeder main body on page 393
	Lock side plate assembly	Optional 500-sheet paper feeder main body on page 393
	Right front guide assembly	Optional 500-sheet paper feeder main body on page 393
	Right guide assembly	Optional 500-sheet paper feeder main body on page 393
	Screw, with washer, M3x6	Optional 500-sheet paper feeder main body on page 393
	screw, tap, M3x6	Optional 500-sheet paper feeder main body on page 393
	Screw, D, M3x8	Optional 500-sheet paper feeder main body on page 393
	Screw, tap, pan head, M4x10	Optional 500-sheet paper feeder main body on page 393
	Ring, E	Optional 500-sheet paper feeder main body on page 393
	Ring, E	Optional 500-sheet paper feeder main body on page 393
	Pin, front guide lock, right	Optional 500-sheet feeder cassette on page 397
	Cover, gear	Optional 500-sheet feeder cassette on page 397
	Flag, size sensing	Optional 500-sheet feeder cassette on page 397
	Arm, lifter	Optional 500-sheet feeder cassette on page 397
	Support, lifter arm	Optional 500-sheet feeder cassette on page 397
	Bushing, lifter arm	Optional 500-sheet feeder cassette on page 397
	Holder, retard gear	Optional 500-sheet feeder cassette on page 397

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Spring, tension	Optional 500-sheet feeder cassette on page 397
	Spring, torsion	Optional 500-sheet feeder cassette on page 397
	Gear, 20T	Optional 500-sheet feeder cassette on page 397
	Body, cassette	Optional 500-sheet feeder cassette on page 397
	Roller, positioning	Optional 500-sheet feeder cassette on page 397
	Claw, cassette	Optional 500-sheet feeder cassette on page 397
	Roller, LU	Optional 500-sheet feeder cassette on page 397
	Flange, positioning roller, right	Optional 500-sheet feeder cassette on page 397
	Shaft, positioning roller, auxiliary	Optional 500-sheet feeder cassette on page 397
	Roller, RD	Optional 500-sheet feeder cassette on page 397
	Gauge, fuel	Optional 500-sheet feeder cassette on page 397
		Optional 500-sheet feeder cassette on page 397
		Optional 500-sheet feeder cassette on page 397
	Spring, torsion	Optional 500-sheet feeder cassette on page 397
	Guide, nip	Optional 500-sheet feeder cassette on page 397
	Plate, paper lifting	Optional 500-sheet feeder cassette on page 397
	Gear, 88T	Optional 500-sheet feeder cassette on page 397
	Gear, 14T	Optional 500-sheet feeder cassette on page 397
	Gear, 14T	Optional 500-sheet feeder cassette on page 397
	Gear, 14T	Optional 500-sheet feeder cassette on page 397
	Gear, 15T/25T	Optional 500-sheet feeder cassette on page 397
	Gear, 37T	Optional 500-sheet feeder cassette on page 397

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Shaft, size sensing	Optional 500-sheet feeder cassette on page 397
	Shaft, retard gear holder	Optional 500-sheet feeder cassette on page 397
	Ring, E	Optional 500-sheet feeder cassette on page 397
	Label, cassette operation	Optional 500-sheet feeder cassette on page 397
	Right side end support assembly	Optional 500-sheet feeder cassette on page 397
	Cassette rear assembly	Optional 500-sheet feeder cassette on page 397
	Left side end support assembly	Optional 500-sheet feeder cassette on page 397
	Front cassette assembly	Optional 500-sheet feeder cassette on page 397
	Screw, tap, pan head, M4x10	Optional 500-sheet feeder cassette on page 397
	Pin, dowel	Optional 500-sheet feeder cassette on page 397
	Screw, tap, M4x12	Optional 500-sheet feeder cassette on page 397
	Arm, front cover support	Optional 1,500-sheet paper feeder covers on page 401
	Stopper, front door	Optional 1,500-sheet paper feeder covers on page 401
	Spring, torsion	Optional 1,500-sheet paper feeder covers on page 401
	Shaft, front cover hinge	Optional 1,500-sheet paper feeder covers on page 401
	Gear, 16T	Optional 1,500-sheet paper feeder covers on page 401
	Paper pickup assembly (see Figure 8-23 Optional 1,500-sheet feeder paper pickup assembly on page 412)	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Holder, connector	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Pin, lifter tray stopper	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Sheet, solenoid damper	Optional 1,500-sheet feeder main body (1 of 2) on page 405

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Latch, front cover, upper	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Block, front cover pushing	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Guide, paper set, right	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Guide, paper set, left	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Block, paper size sensor	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Reel, lifter wire	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Cover, lifter wire reel	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Support, wire pulley	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Cover, pulley	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Shaft, lifter drive	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Pulley, wire, front	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Pulley, wire, rear	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Cover, lifter wire reel	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Plate, lifter wire cover	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Plate, damper support	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Support, release hook, left	Optional 1,500-sheet feeder main body (1 of 2) on page 405

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Holder, hinge shaft, lower	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Guide, paper set, front	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Bushing	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Gear, 14T	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Gear, 15T	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Gear, 19T/39T	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Spring, tension	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Spring, tension	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Spring, torsion	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Gear, 16T	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Spacer, screw	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Frame, rear	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Frame, lower	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Frame, right	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Frame, left	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Saddle, wire	Optional 1,500-sheet feeder main body (1 of 2) on page 405

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Lifter tray assembly	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Paper pickup side plate assembly	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Left hook assembly	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Screw, with washer, M3x8	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Screw, tap, M3x6	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Screw, with washer, M3x6	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Ring, E	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Ring, E	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Pin, dowel	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Foot	Optional 1,500-sheet feeder main body (1 of 2) on page 405
	Holder, connector	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Pin, lifter tray stopper	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Sheet, solenoid damper	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Latch, front cover, upper	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Block, front cover pushing	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Guide, paper set, right	Optional 1,500-sheet feeder main body (2 of 2) on page 409

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Guide, paper set, left	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Block, paper size sensor	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Reel, lifter wire	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Cover, lifter wire reel	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Support, wire pulley	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Cover, pulley	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Shaft, lifter drive	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Pulley, wire, front	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Pulley, wire, rear	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Cover, lifter wire reel	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Plate, lifter wire cover	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Plate, damper support	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Support, release hook, left	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Holder, hinge shaft, lower	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Guide, paper set, front	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Bushing	Optional 1,500-sheet feeder main body (2 of 2) on page 409

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Gear, 14T	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Gear, 15T	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Gear, 19T/39T	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Spring, tension	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Spring, tension	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Spring, torsion	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Gear, 16T	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Spacer, screw	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Frame, rear	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Frame, lower	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Frame, right	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Frame, left	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Saddle, wire	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Lifter tray assembly	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Paper pickup side plate assembly	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Left hook assembly	Optional 1,500-sheet feeder main body (2 of 2) on page 409

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Screw, with washer, M3x8	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Screw, tap, M3x6	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Screw, with washer, M3x6	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Ring, E	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Ring, E	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Pin, dowel	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Foot	Optional 1,500-sheet feeder main body (2 of 2) on page 409
	Bushing, feed shaft	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Gear, 23T	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Arm, pick	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Plate, swing	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Support, feed bushing	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Holder, feed shaft	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Gear, 18T	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Spring, compression	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Gear, 16T	Optional 1,500-sheet feeder paper pickup assembly on page 413

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Screw, tap, M3x6	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Gear, 14T	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Spring, compression	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Ring, retainer	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Ring, slider	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Arm, paper load limit	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Shaft, load limit arm	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Holder, load limit arm	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Guide, paper outlet	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Lack, paper end limit, upper	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Bushing	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Roller, paper feed	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Roller, paper feed	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Shaft, paper feed roller	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Flag, paper feed sensor	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Holder, paper feed sensor flag	Optional 1,500-sheet feeder paper pickup assembly on page 413

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Spring, torsion	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Plate, front upper	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Bushing	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Spring, compression	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Guide, paper feed sensor cable	Optional 1,500-sheet feeder paper pickup assembly on page 413
	IC, photo interrupter	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Ring, E	Optional 1,500-sheet feeder paper pickup assembly on page 413
	Cover, front	Multi-bin mailbox covers on page 417
	Cover, top	Multi-bin mailbox covers on page 417
	Left cover assembly	Multi-bin mailbox covers on page 417
	Right cover assembly	Multi-bin mailbox covers on page 417
	Rear door assembly	Multi-bin mailbox covers on page 417
	Cable, stacker drawer	Multi-bin mailbox covers on page 417
	Joint, left	Multi-bin mailbox covers on page 417
	Joint, right	Multi-bin mailbox covers on page 417
	Lever, in flapper link	Multi-bin mailbox covers on page 417
	IN solenoid assembly	Multi-bin mailbox covers on page 417
	Screw, tap, binding head, M3x8	Multi-bin mailbox covers on page 417
	Frame, base	Multi-bin mailbox covers on page 417

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Screw, P, M3x8	Multi-bin mailbox covers on page 417
	Paper sensing flag assembly	Multi-bin mailbox main body (1 of 2) on page 419
	Top bin flapper assembly	Multi-bin mailbox main body (1 of 2) on page 419
	Bin flapper assembly	Multi-bin mailbox main body (1 of 2) on page 419
	Center bin flapper assembly	Multi-bin mailbox main body (1 of 2) on page 419
	Cable, bin solenoid	Multi-bin mailbox main body (1 of 2) on page 419
	Bin assembly	Multi-bin mailbox main body (1 of 2) on page 419
	Solenoid	Multi-bin mailbox main body (1 of 2) on page 419
	Frame, base	Multi-bin mailbox main body (1 of 2) on page 419
	Pad, arm	Multi-bin mailbox main body (1 of 2) on page 419
	Guide, cable, L	Multi-bin mailbox main body (1 of 2) on page 419
	Latch, rear door	Multi-bin mailbox main body (1 of 2) on page 419
	Bushing	Multi-bin mailbox main body (1 of 2) on page 419
	Stopper, rear door	Multi-bin mailbox main body (1 of 2) on page 419
	Spring, tension	Multi-bin mailbox main body (1 of 2) on page 419
	Pin	Multi-bin mailbox main body (1 of 2) on page 419
	Roller, delivery, inlet	Multi-bin mailbox main body (1 of 2) on page 419
	Bushing, pressure roller	Multi-bin mailbox main body (1 of 2) on page 419
	Bushing	Multi-bin mailbox main body (1 of 2) on page 419
	Roller, intermediate	Multi-bin mailbox main body (1 of 2) on page 419
	Cover, crossmember	Multi-bin mailbox main body (1 of 2) on page 419
	Spacer	Multi-bin mailbox main body (1 of 2) on page 419

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Pulley, 24T	Multi-bin mailbox main body (1 of 2) on page 419
	Gear, 34T/Pulley, 24T	Multi-bin mailbox main body (1 of 2) on page 419
	Pulley, 24T	Multi-bin mailbox main body (1 of 2) on page 419
	Bushing	Multi-bin mailbox main body (1 of 2) on page 419
	Spring, compression	Multi-bin mailbox main body (1 of 2) on page 419
	Gear, 24T	Multi-bin mailbox main body (1 of 2) on page 419
	Gear, 41T	Multi-bin mailbox main body (1 of 2) on page 419
	Gear, 24T/35T/48T	Multi-bin mailbox main body (1 of 2) on page 419
	Gear, 35T	Multi-bin mailbox main body (1 of 2) on page 419
	Gear, 26T	Multi-bin mailbox main body (1 of 2) on page 419
	Pulley/Gear, 34T	Multi-bin mailbox main body (1 of 2) on page 419
	Belt, timing	Multi-bin mailbox main body (1 of 2) on page 419
	Delivery inlet roller assembly	Multi-bin mailbox main body (1 of 2) on page 419
	Lever, bin flapper	Multi-bin mailbox main body (1 of 2) on page 419
	Base, bin lever	Multi-bin mailbox main body (1 of 2) on page 419
	Guide, crossmember	Multi-bin mailbox main body (1 of 2) on page 419
	Spring, compression	Multi-bin mailbox main body (1 of 2) on page 419
	Screw, D, M3x8	Multi-bin mailbox main body (1 of 2) on page 419
	Screw, machine, truss head, M3x4	Multi-bin mailbox main body (1 of 2) on page 419
	Screw, tap, binding head, M3x8	Multi-bin mailbox main body (1 of 2) on page 419
	Screw, tap, pan head, MM4x10	Multi-bin mailbox main body (1 of 2) on page 419
	Ring, E	Multi-bin mailbox main body (1 of 2) on page 419

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Sheet, bottom frame, right	Multi-bin mailbox main body (1 of 2) on page 419
	Sheet, bottom frame, left	Multi-bin mailbox main body (1 of 2) on page 419
	Cable, sensor PCA	Multi-bin mailbox main body (2 of 2) on page 423
	Cable guide assembly	Multi-bin mailbox main body (2 of 2) on page 423
	Frame, base	Multi-bin mailbox main body (2 of 2) on page 423
	Pad, arm	Multi-bin mailbox main body (2 of 2) on page 423
	Guide, cable, L	Multi-bin mailbox main body (2 of 2) on page 423
	Latch, rear door	Multi-bin mailbox main body (2 of 2) on page 423
	Bushing	Multi-bin mailbox main body (2 of 2) on page 423
	Stopper, rear door	Multi-bin mailbox main body (2 of 2) on page 423
	Spring, tension	Multi-bin mailbox main body (2 of 2) on page 423
	Pin	Multi-bin mailbox main body (2 of 2) on page 423
	Roller, delivery, inlet	Multi-bin mailbox main body (2 of 2) on page 423
	Bushing, pressure roller	Multi-bin mailbox main body (2 of 2) on page 423
	Bushing	Multi-bin mailbox main body (2 of 2) on page 423
	Roller, intermediate	Multi-bin mailbox main body (2 of 2) on page 423
	Cover, crossmember	Multi-bin mailbox main body (2 of 2) on page 423
	Spacer	Multi-bin mailbox main body (2 of 2) on page 423
	Pulley, 24T	Multi-bin mailbox main body (2 of 2) on page 423
	Gear, 34T/Pulley, 24T	Multi-bin mailbox main body (2 of 2) on page 423
	Pulley, 24T	Multi-bin mailbox main body (2 of 2) on page 423
	Bushing	Multi-bin mailbox main body (2 of 2) on page 423

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
	Spring, compression	Multi-bin mailbox main body (2 of 2) on page 423
	Gear, 24T	Multi-bin mailbox main body (2 of 2) on page 423
	Gear, 41T	Multi-bin mailbox main body (2 of 2) on page 423
	Gear, 24T/35T/48T	Multi-bin mailbox main body (2 of 2) on page 423
	Gear, 35T	Multi-bin mailbox main body (2 of 2) on page 423
	Gear, 26T	Multi-bin mailbox main body (2 of 2) on page 423
	Pulley/Gear, 34T	Multi-bin mailbox main body (2 of 2) on page 423
	Belt, timing	Multi-bin mailbox main body (2 of 2) on page 423
	Delivery inlet roller assembly	Multi-bin mailbox main body (2 of 2) on page 423
	Lever, bin flapper	Multi-bin mailbox main body (2 of 2) on page 423
	Base, bin lever	Multi-bin mailbox main body (2 of 2) on page 423
	Guide, crossmember	Multi-bin mailbox main body (2 of 2) on page 423
	Spring, compression	Multi-bin mailbox main body (2 of 2) on page 423
	Screw, D, M3x8	Multi-bin mailbox main body (2 of 2) on page 423
	Screw, machine, truss head, M3x4	Multi-bin mailbox main body (2 of 2) on page 423
	Screw, tap, binding head, M3x8	Multi-bin mailbox main body (2 of 2) on page 423
	Screw, tap, pan head, MM4x10	Multi-bin mailbox main body (2 of 2) on page 423
	Ring, E	Multi-bin mailbox main body (2 of 2) on page 423
	Sheet, bottom frame, right	Multi-bin mailbox main body (2 of 2) on page 423
	Sheet, bottom frame, left	Multi-bin mailbox main body (2 of 2) on page 423
CB437-67901 (new)	Formatter assembly (base models)	PCAs—base unit on page 387
CB437-69001 (exchange)	Formatter assembly (base models)	PCAs—base unit on page 387
CB438-67901 (new)	Formatter assembly (network models)	PCAs—base unit on page 387

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
CB438-69001 (exchange)	Formatter assembly (network models)	PCAs—base unit on page 387
CB506-67901	Fuser assembly (110-127 V) (also see Figure 8-13 Fusing assembly on page 382)	Internal components (3 of 3) on page 367
CB506-67901	Fusing assembly (110-127 V)	Fusing assembly on page 383
CB506-67902	Fuser assembly (220-240 V) (also see Figure 8-13 Fusing assembly on page 382)	Internal components (3 of 3) on page 367
CB506-67902	Fusing assembly (220-240 V)	Fusing assembly on page 383
CB506-67903	Transfer roller assembly	Internal components (1 of 3) on page 359
CB506-67904	Product roller kit (contains 2 feed rollers, 1 pickup roller)	Optional 500-sheet paper feeder main body on page 393
CB506-67904	Product roller kit (contains 2 feed rollers, 1 pickup roller)	Optional 500-sheet feeder cassette on page 397
CB506-67904	Product roller kit (contains 2 feed rollers, 1 pickup roller)	Optional 1,500-sheet feeder paper pickup assembly on page 413
CB506-67905	Multipurpose tray kit (contains 1 pickup roller, 1 feed roller, 1 separation roller)	Multipurpose pickup assembly on page 377
RC1-0133-000CN	Spring, tension	Paper delivery assembly on page 381
RC1-0136-000CN	Bushing, paper delivery	Internal components (3 of 3) on page 367
RC1-0198-000CN	Spring, tension	Internal components (3 of 3) on page 367
RC1-0206-000CN	Bushing	Internal components (2 of 3) on page 363
RC1-0213-000CN	Spring, compression	Internal components (2 of 3) on page 363
RC1-0264-000CN	Bushing, feed shaft	Internal components (2 of 3) on page 363
RC1-0306-000CN	Pin, option	Covers—base unit on page 357
RC1-0386-000CN	Guide, connecting cable	Internal components (1 of 3) on page 359
RC2-2459-000CN	Cover, option	Covers—base unit on page 357
RC2-2468-000CN	Cover, formatter (P4015/P4515)	Covers—base unit on page 357
RC2-2475-000CN	Cover, right front (P4015/P4515)	Covers—base unit on page 357
RC2-2476-000CN	Cover, envelope connector (P4015/P4515)	Covers—base unit on page 357

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
RC2-2478-000CN	Cover, right rear (P4015/P4515)	Covers—base unit on page 357
RC2-2480-000CN	Arm, release, A	Internal components (1 of 3) on page 359
RC2-2481-000CN	Arm, release, B	Internal components (1 of 3) on page 359
RC2-2510-000CN	Cover, duplexing outer (P4015/P4515)	Covers—base unit on page 357
RC2-2524-000CN	Flag, paper detect	Optional 1,500-sheet feeder paper pickup assembly on page 413
RC2-2584-000CN	Cover, lock	Optional 1,500-sheet paper feeder covers on page 401
RC2-2640-000CN	Cover, rear	Optional 1,500-sheet paper feeder covers on page 401
RC2-2641-000CN	Cover, right	Optional 1,500-sheet paper feeder covers on page 401
RC2-2642-000CN	Cover, left	Optional 1,500-sheet paper feeder covers on page 401
RC2-2643-000CN	Cover, left lower	Optional 1,500-sheet paper feeder covers on page 401
RC2-2667-000CN	Rod, switch	Internal components (2 of 3) on page 363
RC2-5239-000CN	Cover, legal (P4015/P4515)	Covers—base unit on page 357
RC2-5262-000CN	Limiter, cassette torque	500-sheet cassette on page 373
RC2-5262-000CN	Limiter, cassette torque	Optional 500-sheet feeder cassette on page 397
RC2-5262-000CN	Limiter, cassette torque	Optional 1,500-sheet feeder front door assembly on page 403
RC2-5757-000CN	Cover, formatter (P4014)	Covers—base unit on page 357
RC2-5758-000CN	Cover, right front (P4014)	Covers—base unit on page 357
RC2-5759-000CN	Cover, envelope connector (P4014)	Covers—base unit on page 357
RC2-5760-000CN	Cover, duplexing outer (P4014)	Covers—base unit on page 357
RC2-5761-000CN	Cover, legal (P4014)	Covers—base unit on page 357
RC2-5768-000CN	Cover, right rear (P4014)	Covers—base unit on page 357

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
RC2-5783-000CN	Bushing	Internal components (2 of 3) on page 363
RH7-1603-020CN	Motor, stepping	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RK2-0270-000CN	Solenoid	Internal components (2 of 3) on page 363
RK2-0359-000CN	Thermistor unit	Internal components (3 of 3) on page 367
RK2-1988-000CN	Fan	Internal components (3 of 3) on page 367
RK2-1989-000CN	Fan	Internal components (3 of 3) on page 367
RK2-1991-000CN	Fan	Internal components (3 of 3) on page 367
RK2-1992-000CN	Fan	Internal components (3 of 3) on page 367
RL1-1641-000CN	Roller, pickup	Multipurpose pickup assembly on page 377
RL1-1654-000CN	Roller, separation	Multipurpose pickup assembly on page 377
RL1-1657-000CN	Motor, DC, 24 V, main drive	Internal components (2 of 3) on page 363
RL1-1658-000CN	Shaft, retard drive	Internal components (2 of 3) on page 363
RL1-1659-000CN	Motor, DC, 24 V, drum drive	Internal components (1 of 3) on page 359
RL1-1663-000CN	Roller, feed	Multipurpose pickup assembly on page 377
RL1-1667-000CN	Cover, envelope	Internal components (1 of 3) on page 359
RM1-0036-020CN	Paper pickup roller assembly	Internal components (2 of 3) on page 363
RM1-0036-020CN	Paper pickup roller assembly	Optional 500-sheet paper feeder main body on page 393
RM1-0036-020CN	Paper pickup roller assembly	Optional 1,500-sheet feeder paper pickup assembly on page 413
RM1-0037-020CN	Paper feed roller assembly	Internal components (2 of 3) on page 363
RM1-0037-020CN	Paper feed roller assembly	500-sheet cassette on page 373
RM1-0037-020CN	Paper feed roller assembly	Optional 500-sheet paper feeder main body on page 393

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
RM1-0037-020CN	Paper feed roller assembly	Optional 500-sheet feeder cassette on page 397
RM1-0037-020CN	Paper feed roller assembly	Optional 1,500-sheet feeder front door assembly on page 403
RM1-0037-020CN	Paper feed roller assembly	Optional 1,500-sheet feeder paper pickup assembly on page 413
RM1-0289-030CN	Oil damper assembly	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RM1-1136-000CN	Lifter drive assembly	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RM1-4525-000CN	Size detect assembly	Internal components (1 of 3) on page 359
RM1-4526-000CN	Paper delivery drive assembly	Internal components (3 of 3) on page 367
RM1-4527-000CN	Paper feed roller assembly	Internal components (1 of 3) on page 359
RM1-4529-000CN	Paper delivery assembly (also see Figure 8-12 Paper delivery assembly on page 380)	Internal components (3 of 3) on page 367
RM1-4529-000CN	Paper delivery assembly	Paper delivery assembly on page 381
RM1-4531-000CN	Face-up tray assembly (P4015/P4515)	Covers—base unit on page 357
RM1-4532-000CN	Paper pickup drive assembly	Internal components (2 of 3) on page 363
RM1-4534-000CN	Front cover assembly	Covers—base unit on page 357
RM1-4539-000CN	Tag holder assembly	Internal components (2 of 3) on page 363
RM1-4548-000CN	Paper feed assembly	Power supply assembly on page 371
RM1-4549-000CN	Electrical components assembly (110-127 V)	Power supply assembly on page 371
RM1-4549-000CN	Electrical components assembly (110-127 V)	PCAs—base unit on page 387
RM1-4550-000CN	Right cover assembly (P4015/P4515)	Covers—base unit on page 357
RM1-4551-000CN	Left cover assembly (P4015/P4515)	Covers—base unit on page 357
RM1-4552-000CN	Top cover assembly (P4015/P4515)	Covers—base unit on page 357
RM1-4558-000CN	Right guide assembly (P4015/P4515)	Internal components (3 of 3) on page 367

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
RM1-4559-000CN	500-sheet tray cassette	Internal components (1 of 3) on page 359
RM1-4559-000CN	500-sheet cassette	500-sheet cassette on page 373
RM1-4559-000CN	Optional 500-sheet feeder cassette	Optional 500-sheet feeder cassette on page 397
RM1-4562-000CN	Paper feed shaft Z assembly	Internal components (2 of 3) on page 363
RM1-4563-000CN	Multipurpose tray pickup assembly	Internal components (1 of 3) on page 359
RM1-4563-000CN	Multipurpose pickup assembly	Multipurpose pickup assembly on page 377
RM1-4576-000CN	Right front guide assembly	Internal components (2 of 3) on page 363
RM1-4578-000CN	Electrical components assembly (220-240 V)	Power supply assembly on page 371
RM1-4578-000CN	Electrical components assembly (220-240 V)	PCAs—base unit on page 387
RM1-4582-000CN	DC controller PCA	Internal components (3 of 3) on page 367
RM1-4582-000CN	DC controller PCA	PCAs—base unit on page 387
RM1-4585-000CN	Lifter drive assembly	Internal components (3 of 3) on page 367
RM1-5051-000CN	Fuser motor assembly	Internal components (3 of 3) on page 367
RM1-5059-000CN	Control panel assembly (P4015/P4515)	Covers—base unit on page 357
RM1-5060-000CN	Control panel assembly (P4014)	Covers—base unit on page 357
RM1-5078-000CN	Cable, inlet (110-127 V)	Power supply assembly on page 371
RM1-5079-000CN	Cable, inlet (220-240 V)	Power supply assembly on page 371
RM1-5080-000CN	Cable, door switch	Internal components (3 of 3) on page 367
RM1-5081-000CN	Cable, full sensor	Internal components (3 of 3) on page 367
RM1-5082-000CN	Cable, panel	Internal components (3 of 3) on page 367
RM1-5085-000CN	Cable, envelope feeder	Internal components (3 of 3) on page 367
RM1-5087-000CN	Cable, laser	Internal components (2 of 3) on page 363
RM1-5088-000CN	Cable, fuser motor	Internal components (3 of 3) on page 367

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
RM1-5089-000CN	Cable, feed motor	Internal components (2 of 3) on page 363
RM1-5090-000CN	Cable, drum motor	Internal components (1 of 3) on page 359
RM1-5091-000CN	Cable, size sensor	Internal components (1 of 3) on page 359
RM1-5096-000CN	Sensor assembly	Multi-bin mailbox main body (2 of 2) on page 423
RM1-5126-000CN	Cable, interface	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RM1-5127-000CN	Cable, size sensor	Optional 1,500-sheet feeder main body (2 of 2) on page 409
RM1-5128-000CN	Cable, door sensor	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RM1-5129-000CN	Cable, feed, sensor	Optional 1,500-sheet feeder paper pickup assembly on page 413
RM1-5250-000CN	Top cover assembly (P4014)	Covers—base unit on page 357
RM1-5255-000CN	Front door assembly	Optional 1,500-sheet paper feeder covers on page 401
RM1-5255-000CN	Optional 1,500-sheet feeder front door assembly	Optional 1,500-sheet feeder front door assembly on page 403
RM1-5259-000CN	Remnant indication assembly	Optional 1,500-sheet feeder main body (2 of 2) on page 409
RM1-5261-000CN	Paper size detect assembly	Optional 1,500-sheet feeder main body (2 of 2) on page 409
RM1-5262-000CN	Paper pickup drive assembly	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RM1-5264-000CN	Paper detect sensor assembly	Optional 1,500-sheet feeder paper pickup assembly on page 413
RM1-5265-000CN	Numbering assembly	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RM1-5266-000CN	Bin solenoid assembly	Multi-bin mailbox main body (1 of 2) on page 419
RM1-5267-000CN	Drive assembly	Multi-bin mailbox main body (2 of 2) on page 423

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
RM1-5448-000CN	Face-up tray assembly (P4014)	Covers—base unit on page 357
RM1-5449-000CN	Right cover assembly (P4014)	Covers—base unit on page 357
RM1-5450-000CN	Left cover assembly (P4014)	Covers—base unit on page 357
RM1-5451-000CN	Right guide assembly (P4014)	Internal components (3 of 3) on page 367
RM1-5460-000CN	Registration assembly	Internal components (1 of 3) on page 359
RM1-5461-000CN	Grounding plate assembly	Internal components (1 of 3) on page 359
RM1-5465-000CN	Laser scanner assembly	Internal components (2 of 3) on page 363
RM1-6214-000CN	1,500-sheet feeder driver PCA	Optional 1,500-sheet feeder PCA on page 389
RM1-6214-000CN	1,500-sheet feeder driver PCA	Optional 1,500-sheet feeder main body (1 of 2) on page 405
RM1-6224-000CN	Multi-bin mailbox PCA	Multi-bin mailbox PCA on page 391
RM1-6224-000CN	Multi-bin mailbox PCA	Multi-bin mailbox main body (2 of 2) on page 423
RU5-0045-020CN	Gear, 18T	Internal components (2 of 3) on page 363
RU6-0159-000CN	Gear, 23T	Internal components (2 of 3) on page 363
RU6-2105-000CN	Spring, grounding	Paper delivery assembly on page 381
RU6-2115-000CN	Spring, tension	Internal components (2 of 3) on page 363
VS1-7500-006CN	Connector, drawer, 6P	Optional 1,500-sheet feeder main body (1 of 2) on page 405
VS1-7500-008CN	Connector, 8P	Multi-bin mailbox covers on page 417
VS1-7514-006CN	Connector, drawer, 6P	Power supply assembly on page 371
WG8-5624-000CN	IC, photo interrupter	Internal components (3 of 3) on page 367
XA9-1420-000CN	Screw, with washer, M3x8	Optional 1,500-sheet paper feeder covers on page 401
XA9-1464-000CN	Screw, flat head RS, M3x6	Power supply assembly on page 371

Table 8-27 Numerical parts list (continued)

Part number	Description	Table and page
XA9-1503-000CN	Screw, tap, M3x6	Internal components (1 of 3) on page 359
XA9-1671-000CN	Screw, D, M3x8	Internal components (1 of 3) on page 359
XB1-1300-605CN	Screw, machine, pan head, M3x6	Power supply assembly on page 371
XB2-7300-607CN	Screw, with washer, M3x6	Internal components (3 of 3) on page 367
XB2-7400-606CN	Screw, with washer, M4x6	Power supply assembly on page 371
XB4-7300-809CN	Screw, tap, binding head, M3x8	Internal components (2 of 3) on page 363
XB4-7401-007CN	Screw, tapping, pan head, M4x10	Internal components (1 of 3) on page 359
XB4-7401-007CN	Screw, tap, pan head, M4x10	Optional 1,500-sheet paper feeder covers on page 401
XD9-0232-000CN	Ring, E	Internal components (2 of 3) on page 363

A Service and support

Hewlett-Packard limited warranty statement

HP PRODUCT

HP LaserJet P4014, P4014n, P4015n, P4015tn, P4015x, P4515n, P4515tn, P4515x, P4515xm

DURATION OF LIMITED WARRANTY

One-year limited warranty

HP warrants to you, the end-user customer, that HP hardware and accessories will be free from defects in materials and workmanship after the date of purchase, for the period specified above. If HP receives notice of such defects during the warranty period, HP will, at its option, either repair or replace products which prove to be defective. Replacement products may be either new or equivalent in performance to new.

HP warrants to you that HP software will not fail to execute its programming instructions after the date of purchase, for the period specified above, due to defects in material and workmanship when properly installed and used. If HP receives notice of such defects during the warranty period, HP will replace software which does not execute its programming instructions due to such defects.

HP does not warrant that the operation of HP products will be uninterrupted or error free. If HP is unable, within a reasonable time, to repair or replace any product to a condition as warranted, you will be entitled to a refund of the purchase price upon prompt return of the product.

HP products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.

Warranty does not apply to defects resulting from (a) improper or inadequate maintenance or calibration, (b) software, interfacing, parts or supplies not supplied by HP, (c) unauthorized modification or misuse, (d) operation outside of the published environmental specifications for the product, or (e) improper site preparation or maintenance.

TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTIES ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND HP SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE. Some countries/regions, states or provinces do not allow limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This warranty gives you specific legal rights and you might also have other rights that vary from country/region to country/region, state to state, or province to province. HP's limited warranty is valid in any country/region or locality where HP has a support presence for this product and where HP has marketed this product. The level of warranty service you receive may vary according to local standards. HP will not alter form, fit or function of the product to make it operate in a country/region for which it was never intended to function for legal or regulatory reasons.

TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL HP OR ITS

SUPPLIERS BE LIABLE FOR LOSS OF DATA OR FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some countries/regions, states or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Print cartridge limited warranty statement

This HP product is warranted to be free from defects in materials and workmanship.

This warranty does not apply to products that (a) have been refilled, refurbished, remanufactured or tampered with in any way, (b) experience problems resulting from misuse, improper storage, or operation outside of the published environmental specifications for the printer product or (c) exhibit wear from ordinary use.

To obtain warranty service, please return the product to place of purchase (with a written description of the problem and print samples) or contact HP customer support. At HP's option, HP will either replace products that prove to be defective or refund your purchase price.

TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTY IS EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND HP SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE.

TO THE EXTENT ALLOWED BY LOCAL LAW, IN NO EVENT WILL HP OR ITS SUPPLIERS BE LIABLE FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.

THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.

Customer self-repair warranty service

HP products are designed with many Customer Self Repair (CSR) parts to minimize repair time and allow for greater flexibility in performing defective parts replacement. If during the diagnosis period, HP identifies that the repair can be accomplished by the use of a CSR part, HP will ship that part directly to you for replacement. There are two categories of CSR parts: 1) Parts for which customer self repair is mandatory. If you request HP to replace these parts, you will be charged for the travel and labor costs of this service. 2) Parts for which customer self repair is optional. These parts are also designed for Customer Self Repair. If, however, you require that HP replace them for you, this may be done at no additional charge under the type of warranty service designated for your product.

Based on availability and where geography permits, CSR parts will be shipped for next business day delivery. Same-day or four-hour delivery may be offered at an additional charge where geography permits. If assistance is required, you can call the HP Technical Support Center and a technician will help you over the phone. HP specifies in the materials shipped with a replacement CSR part whether a defective part must be returned to HP. In cases where it is required to return the defective part to HP, you must ship the defective part back to HP within a defined period of time, normally five (5) business days. The defective part must be returned with the associated documentation in the provided shipping material. Failure to return the defective part may result in HP billing you for the replacement. With a customer self repair, HP will pay all shipping and part return costs and determine the courier/carrier to be used.

Customer support

Get telephone support, free during your warranty period, for your country/region	Country/region phone numbers are on the flyer that was in the box with your product or at www.hp.com/support/ .
Have the product name, serial number, date of purchase, and problem description ready.	
Get 24-hour Internet support	www.hp.com/support/hpljp4010series or www.hp.com/support/hpljp4510series
Get support for products used with a Macintosh computer	www.hp.com/go/macosex
Download software utilities, drivers, and electronic information	www.hp.com/go/ljp4010series_software or www.hp.com/go/ljp4510series_software
Order supplies and paper	www.hp.com/go/suresupply
Order genuine HP parts or accessories	www.hp.com/buy/parts
Order additional HP service or maintenance agreements	www.hp.com/go/carepack

HP maintenance agreements

HP has several types of maintenance agreements that meet a wide range of support needs. Maintenance agreements are not part of the standard warranty. Support services may vary by area. Check with your local HP dealer to determine the services available to you.

On-site service agreements

To provide you with the level of support best suited to your needs, HP has on-site service agreements with a selection of response times.

Next-day on-site service

This agreement provides support by the next working day following a service request. Extended coverage hours and extended travel beyond HP's designated service zones are available on most on-site agreements (for additional charges).

Weekly (volume) on-site service

This agreement provides scheduled weekly on-site visits for organizations with many HP products. This agreement is designated for sites using 25 or more workstation products, including devices, plotters, computers, and disk drives.

Repacking the device

If HP Customer Care determines that your device needs to be returned to HP for repair, follow the steps below to repack the device before shipping it.

△ **CAUTION:** Shipping damage as a result of inadequate packing is the customer's responsibility.

To repack the device

1. Remove and retain any DIMMs cards that you have purchased and installed in the device. Do not remove the DIMM that came with the device.

△ **CAUTION:** Static electricity can damage DIMMs. When handling DIMMs, either wear an antistatic wrist strap, or frequently touch the surface of the DIMM antistatic package and then touch bare metal on the device. To remove the DIMMs, see [Install memory on page 84](#).

2. Remove and retain the print cartridge.

△ **CAUTION:** It is *extremely important* to remove the print cartridge before shipping the device. A print cartridge that remains in the device during shipping will leak and entirely cover the device engine and other parts with toner.

To prevent damage to the print cartridge, avoid touching the roller on it, and store the print cartridge in its original packing material or so that it is not exposed to light.

3. Remove and retain the power cable, interface cable, and optional accessories.
4. If possible, include print samples and 50 to 100 sheets of paper or other print media that did not print correctly.
5. In the U.S., call HP Customer Care to request new packing material. In other areas, use the original packing material, if possible. Hewlett-Packard recommends insuring the equipment for shipment.

Extended warranty

HP Support provides coverage for the HP hardware product and all HP-supplied internal components. The hardware maintenance covers a 1- to 3-year period from date of the HP product purchase. The customer must purchase HP Support within the stated factory warranty. For more information, contact the HP Customer Care Service and Support group.

B Specifications

- Physical specifications
- Electrical specifications
- Acoustic specifications
- Operating environment

Physical specifications

Table B-1 Product dimensions and weights

Product model	Height	Depth	Width	Weight
HP LaserJet P4010 and P4510 Series base and n models	394 mm (15.5 in)	4515 mm (17.8 in)	425 mm (16.75 in)	23.6 kg (51.9 lb)
HP LaserJet P4010 and P4510 Series tn models	514 mm (20.25 in)	451 mm (17.8 in)	425 mm (16.75 in)	30.4 kg (66.8 lb)
HP LaserJet P4010 and P4510 Series x models	514 mm (20.25 in)	533 mm (21.0 in)	425 mm (16.75 in)	32.6 kg (71.7 lb)
HP LaserJet P4510 Series xm model	955 mm (37.6 in)	533 mm (21.0 in)	425 mm (16.75 in)	39.6 kg (87.1 lb)
Optional 500-sheet feeder	121 mm (4.8 in)	448.4 mm (17.7 in)	415 mm (16.3 in)	6.7 kg (14.7 lb)
Optional 1500-sheet tray	263.5 mm (10.4 in)	511.5 mm (20.1 in)	421 mm (16.6 in)	13 kg (28.7 lb)
Optional duplexing unit	154 mm (6.1 in)	348 mm (13.7 in)	332 mm (13.1 in)	2.5 kg (5.5 lb)
Optional envelope feeder	113 mm (4.4 in)	354 mm (13.9 in)	328 mm (12.9 in)	2.5 kg (5.5 lb)
Optional stapler/stacker	371 mm (14.6 in)	430 mm (16.9 in)	387 mm (15.2 in)	4.2 kg (9.3 lb)
Optional stacker	304 mm (12 in)	430 mm (16.9 in)	378 mm (14.9 in)	3.2 kg (7.1 lb)
Optional multi-bin mailbox	522 mm (20.6 in)	306 mm (12 in)	353 mm (13.9 in)	7.0 kg (15.4 lb)
Optional printer stand	114 mm (4.5 in)	653 mm (25.7 in)	663 mm (26.1 in)	13.6 kg (30 lb)

Table B-2 Product dimensions with all doors and trays fully opened

Product model	Height	Depth	Width
HP LaserJet P4010 and P4510 Series base and n models	394 mm (15.5 in)	864 mm (34.0 in)	425 mm (16.75 in)
HP LaserJet P4010 and P4510 Series tn models	514 mm (20.25 in)	864 mm (34.0 in)	425 mm (16.75 in)
HP LaserJet P4010 and P4510 Series x models	514 mm (20.25 in)	864 mm (34.0 in)	425 mm (16.75 in)
HP LaserJet P4510 Series xm model	955 mm (37.6 in)	902 mm (35.5 in)	425 mm (16.75 in)

Electrical specifications

⚠ WARNING! Power requirements are based on the country/region where the product is sold. Do not convert operating voltages. This can damage the product and void the product warranty.

Table B-3 Power requirements

Specification	110-volt models	220-volt models
Power requirements	100 to 127 volts (± 10%)	220 to 240 volts (± 10%)
	50/60 Hz (± 2 Hz)	50/60 Hz (± 2 Hz)
Rated current	10.7 Amps	5.7 Amps

Table B-4 Power consumption (average, in watts)

Product model	Printing	Ready	Sleep	Off
HP LaserJet P4014 models	800 W	18 W	13 W	Less than 0.1 W
HP LaserJet P4015 models	840 W	18 W	13 W	Less than 0.1 W
HP LaserJet P4515 models	910 W	20 W	13 W	Less than 0.1 W

¹ Values subject to change. See www.hp.com/support/hpljp4010series or www.hp.com/support/hpljp4510series for current information.

² Power numbers are the highest values measured using all standard voltages.

³ Default time from Ready mode to Sleep = 30 minutes.

⁴ Heat dissipation in Ready mode = 70 BTU/hour.

⁵ Recovery time from Sleep to start of printing = less than 15 seconds.

⁶ HP LaserJet P4014 speed is 45 ppm Letter size. HP LaserJet P4015 speed is 52 ppm Letter size. HP LaserJet P4515 speed is 62 ppm Letter size.

Acoustic specifications

Table B-5 Sound power and pressure level

Product model	Sound power level	Declared per ISO 9296
HP LaserJet P4014 models	Printing	$L_{WAd} = 7.1$ Bels (A) [71 dB(A)]
	Ready	$L_{WAd} = 4.0$ Bels (A) [40 dB(A)]
HP LaserJet P4015 models	Printing	$L_{WAd} = 7.2$ Bels (A) [72 dB(A)]
	Ready	$L_{WAd} = 4.1$ Bels (A) [41 dB(A)]
HP LaserJet P4515 models	Printing	$L_{WAd} = 7.4$ Bels (A) [74 dB(A)]
	Ready	$L_{WAd} = 4.8$ Bels (A) [48 dB(A)]
Product model	Sound pressure level	Declared per ISO 9296
HP LaserJet P4014 models	Printing	$L_{pAm} = 58$ dB (A)
	Ready	$L_{pAm} = 27$ dB (A)
HP LaserJet P4015 models	Printing	$L_{pAm} = 58$ dB (A)
	Ready	$L_{pAm} = 27$ dB (A)
HP LaserJet P4515 models	Printing	$L_{pAm} = 60$ dB (A)
	Ready	$L_{pAm} = 31$ dB (A)

¹ Values are based on preliminary data. See www.hp.com/support/hpljp4010series or www.hp.com/support/hpljp4510series for current information.

² HP LaserJet P4014 speed is 45 ppm Letter size. HP LaserJet P4015 speed is 52 ppm Letter size. HP LaserJet P4515 speed is 62 ppm Letter size.

³ Configuration tested (HP LaserJet P4014): LJ P4014n model, printing on A4-size paper in simplex mode

⁴ Configuration tested (HP LaserJet P4015): LJ P4015x model, printing on A4-size paper in simplex mode

⁵ Configuration tested (HP LaserJet P4515): LJ P4515x model, printing on A4-size paper in simplex mode

Operating environment

Table B-6 Necessary conditions

Environmental condition	Printing	Storage/standby
Temperature (product and print cartridge)	7.5° to 32.5°C (45.5° to 90.5°F)	0° to 35°C (32° to 95°F)
Relative humidity	5% to 90%	35% to 85%

C Regulatory information

- [FCC regulations](#)
- [Declaration of conformity](#)
- [Safety statements](#)

FCC regulations

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. If this equipment is not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase separation between equipment and receiver.
- Connect equipment to an outlet on a circuit different from that to which the receiver is located.
- Consult your dealer or an experienced radio/TV technician.



NOTE: Any changes or modifications to the printer that are not expressly approved by HP could void the user's authority to operate this equipment.

Use of a shielded interface cable is required to comply with the Class B limits of Part 15 of FCC rules.

Declaration of conformity

Declaration of conformity

Declaration of Conformity

according to ISO/IEC 17050-1 and EN 17050-1, DoC#: BOISB-0702-00-rel.1.0

Manufacturer's Name: Hewlett-Packard Company
Manufacturer's Address: 11311 Chinden Boulevard,
Boise, Idaho 83714-1021, USA

declares, that the product

Product Name: HP LaserJet P4014 series, P4015 series, and P4515 series

Regulatory Model Number³⁾: BOISB-0702-02

Product Options: ALL

Print Cartridges: CC364A /CC364X

conforms to the following Product Specifications:

Safety: IEC 60950-1:2001 / EN60950-1: 2001 +A11
IEC 60825-1:1993 +A1 +A2 / EN 60825-1:1994 +A1 +A2 (Class 1 Laser/LED Product)
GB4943-2001

EMC: CISPR22:2005 / EN 55022:2006 - Class B¹⁾
EN 61000-3-2:2000 +A2
EN 61000-3-3:1995 +A1
EN 55024:1998 +A1 +A2
FCC Title 47 CFR, Part 15 Class B²⁾ / ICES-003, Issue 4
GB9254-1998, GB17625.1-2003

Supplementary Information:

The product herewith complies with the requirements of the EMC Directive 2004/108/EEC and the Low Voltage Directive 2006/95/EEC, and carries the CE-Marking accordingly.

- 1) The product was tested in a typical configuration with Hewlett-Packard Personal Computer Systems.
- 2) This Device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- 3) For regulatory purposes, this product is assigned a Regulatory model number. This number should not be confused with the marketing name or the product number(s).

Boise, Idaho , USA

June 29, 2007

For regulatory topics only:

European Contact: Your Local Hewlett-Packard Sales and Service Office or Hewlett-Packard GmbH, Department HQ-TRE / Standards Europe., Herrenberger Strasse 140, , D-71034, Böblingen, (FAX: +49-7031-14-3143), <http://www.hp.com/go/certificates>

USA Contact: Product Regulations Manager, Hewlett-Packard Company,, PO Box 15, Mail Stop 160, Boise, ID 83707-0015, , (Phone: 208-396-6000)

Safety statements

Laser safety

The Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration has implemented regulations for laser products manufactured since August 1, 1976. Compliance is mandatory for products marketed in the United States. The device is certified as a “Class 1” laser product under the U.S. Department of Health and Human Services (DHHS) Radiation Performance Standard according to the Radiation Control for Health and Safety Act of 1968. Since radiation emitted inside the device is completely confined within protective housings and external covers, the laser beam cannot escape during any phase of normal user operation.

⚠ **WARNING!** Using controls, making adjustments, or performing procedures other than those specified in this user guide may result in exposure to hazardous radiation.

Canadian DOC regulations

Complies with Canadian EMC Class B requirements.

« Conforme à la classe B des normes canadiennes de compatibilité électromagnétiques. « CEM ». »

VCCI statement (Japan)

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境でを使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

Power cord statement (Japan)

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

EMI statement (Korea)

B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서
주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Laser statement for Finland

Luokan 1 laserlaite

Klass 1 Laser Apparat

HP LaserJet P4014, P4014n, P4015n, P4015tn, P4015x, P4515n, P4515tn, P4515x, P4515xm, laserkirjoitin on käyttäjän kannalta turvallinen luokan 1 laserlaite. Normaalisissa käytössä kirjoittimen suojakotelointi estää lasersäteiden pääsyn laitteen ulkopuolelle. Laitteen turvallisuusluokka on määritetty standardin EN 60825-1 (1994) mukaisesti.

VAROITUS !

Laitteen käyttäminen muulla kuin käyttöohjeessa mainitulla tavalla saattaa altistaa käyttäjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING !

Om apparaten används på annat sätt än i bruksanvisning specificerats, kan användaren utsättas för osynlig laserstrålning, som överskrider gränsen för laserklass 1.

HUOLTO

HP LaserJet P4014, P4014n, P4015n, P4015tn, P4015x, P4515n, P4515tn, P4515x, P4515xm - kirjoittimen sisällä ei ole käyttäjän huollettavissa olevia kohteita. Laitteen saa avata ja huoltaa ainoastaan sen huoltamiseen koulutettu henkilö. Tällaiseksi huoltotoimenpiteeksi ei katsota väriainekasetin vaihtamista, paperiradan puhdistusta tai muita käyttäjän käsikirjassa lueteltuja, käyttäjän tehtäväksi tarkoitettuja ylläpitotoimia, jotka voidaan suorittaa ilman erikoistyökaluja.

VARO !

Mikäli kirjoittimen suojakotelo avataan, olet alttiina näkymättömälle lasersäteilylle laitteen ollessa toiminnassa. Älä katso säteeseen.

VARNING !

Om laserprinterns skyddshölje öppnas då apparaten är i funktion, utsättas användaren för osynlig laserstrålning. Betrakta ej strålen. Tiedot laitteessa käytettävän laserdiodin säteilyominaisuuksista: Aallonpituus 775-795 nm Teho 5 m W Luokan 3B laser.

Substances table (China)

有毒有害物质表

根据中国电子信息产品污染控制管理办法的要求而出台

部件名称	有毒有害物质和元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
打印引擎	X	0	X	X	0	0
控制面板	0	0	0	0	0	0
塑料外壳	0	0	0	0	0	0
格式化板组件	X	0	0	0	0	0
碳粉盒	X	0	0	0	0	0

3043

0：表示在此部件所用的所有同类材料中，所含的此有毒或有害物质均低于 SJ/T11363-2006 的限制要求。

X：表示在此部件所用的所有同类材料中，至少一种所含的此有毒或有害物质高于 SJ/T11363-2006 的限制要求。

注：引用的“环保使用期限”是根据在正常温度和湿度条件下操作使用产品而确定的。

Index

Symbols/Numerics

1,500-sheet tray

- door, removing 232
- driver PCA, removing 235
- feed rollers, removing 225
- left-side cover, removing 229
- lift-drive assembly,
 - removing 236
- loading 59
- motor, removing 234
- paper jams 312
- rear cover, removing 227
- right-side cover,
 - removing 228
- separation roller,
 - removing 226

500-sheet tray

- loading 57
- paper jams 311

A

- A4 paper settings 27, 28
- accessibility features 7
- accessories
 - available 6
 - ordering 342
 - part numbers 342
- acoustic specifications 504
- after service checklist 132
- alerts, e-mail 16
- anticounterfeit supplies 79
- AppleTalk settings 40
- assembly locations 352
- auto continue setting 35

B

- binding edge settings 27
- bins, output
 - jams, clearing 320
 - paper path test 45

- removing rear 150
- selecting 63
- blank pages
 - suppressing 29
- blank pages, troubleshooting 334
- blurred print, problem-solving 333
- Bonjour Settings 16
- both sides, printing on
 - binding edge settings 27
 - Macintosh settings 16
 - Show Me How menu 23
 - usage page 25
- browser requirements
 - embedded Web server 71
- buttons, control panel 20

C

cables

- network, troubleshooting 334
- USB, troubleshooting 334
- Canadian DOC regulations 508

card stock

- fuser modes 30
- output bin, selecting 63
- carriage returns, settings 29

cartridges

- authentication 79
- density settings 32
- EconoMode 31, 78
- features 7
- genuine HP 78
- non-HP 78
- ordering through embedded Web server 73
- part numbers 344
- replacement intervals 78
- replacing 80
- status messages 20

- storage 78
- warranty 496
- cartridges, print
 - paper jams 307
 - replacing 139
- cartridges, staple
 - loading 82
- characters, misformed 331
- checklists
 - after service 132
 - before service 132
 - preservice 132
- circuit diagram 274
- cleaning
 - exterior 95
 - fuser 280
- cleaning page 32
- cleaning page, printing 280
- clearable warnings setting 35
- clearing jams
 - 1,500-sheet tray 312
 - 500-sheet tray 311
 - duplexer 314
 - envelope feeder 309
 - fuser area 315
 - locations 307
 - output area 320
 - staple 322
 - top-cover 307
 - Tray 1 311
- component locations 352, 358
- configuration page
 - Macintosh 16
- Configure Device menu 27
- connectors
 - locating 268
- control panel
 - blank, troubleshooting 242
 - buttons 20

- cleaning page, automatic 95, 281
- cleaning page, printing 95
- clearable warning settings 35
- Configure Device menu 27
- date/time settings 33
- Diagnostics menu 45
- display 20
- I/O menu 38
- Information menu 25
- language, selecting 36
- lights 20
- menus 22
- Paper Handling menu 26
- Print Quality menu 30
- Printing menu 27
- Resets menu 44
- Retrieve Job menu 24
- security 76
- Show Me How menu 23
- System Setup menu 33
- controlling print jobs 62
- cooling fan FN101, replacing 202
- cooling fan FN102, replacing 176
- cooling fan FN103, replacing 178
- cooling fan FN301, replacing 204
- copies, default number of 27
- copying
 - quality, troubleshooting 329
- counterfeit supplies 79
- counts, page 338
- Courier font settings 28
- covers
 - 1,500-sheet tray, removing 227
 - envelope accessory, removing 147
 - formatter, removing 152
 - front, removing 174
 - left-side, removing 166
 - right-side, removing 163
 - top, removing 161
- creased paper, problem-solving 332
- crooked pages 331
- curled paper, problem-solving 331
- custom-size paper
 - tray settings 27
- customer support
 - embedded Web server links 73
 - HP Printer Utility pages 16
 - online 498
 - repacking device 499
- D**
 - darkness, setting 32
 - date, setting 33
 - DC controller
 - PCA, locating 268
 - removing 188
 - replacing 153
 - declaration of conformity 507
 - default settings, restoring 44
 - defects
 - examples of 329
 - repeating 280
 - density
 - problem-solving 329
 - settings 16, 32
 - device discovery 18
 - device languages
 - settings 35
 - diagnostics
 - manual sensor test 250
 - network 41
 - Diagnostics menu 45
 - dimensions, product 502
 - DIMMs
 - installing 84
 - memory 141
 - part numbers 345
 - types available 84
 - verifying installation 88
 - disk
 - file directory, printing 25
 - initialization 338
 - installing 93
 - removing 94
 - DLC/LLC 40
 - DNS settings 39
 - documentation 2
 - dots, problem-solving 329, 332
 - double-sided printing
 - binding edge settings 27
 - Macintosh settings 16
 - Show Me How menu 23
 - usage page 25
- dpi, settings 16, 31
- draft quality printing 31
- drivers
 - included 6
 - paper types 50
 - supported 16
- dropouts, problem-solving 329
- drum drive, removing 199
- drum drive, replacing 199
- duplex printing accessory
 - jams 314
 - part number 344
- duplexer
 - Macintosh settings 16
 - paper path test 45
 - settings 27
 - Show Me How menu 23
 - usage page 25
- E**
 - e-mail alerts 16
 - EconoMode setting 31, 78
 - EIO cards
 - installing 93
 - part numbers 345
 - removing 94
 - settings 38
 - electrical specifications 502
 - electrostatic discharge (ESD) 130
 - embedded Web server
 - features 71
 - security 75
 - energy specifications 502
 - envelope accessory, front
 - covers, removing 147
 - envelope feeder
 - paper jams 309
 - part number 344
 - envelopes
 - default size, setting 27
 - output bin, selecting 63
 - wrinkled, problem-solving 332
 - envelopes, loading 55
 - environment for product
 - specifications 504
 - error messages
 - e-mail alerts 16
 - event log 45

- lights, control panel 20
- settings 35
- ESD (electrostatic discharge) 130
- Ethernet cards, part numbers 345
- event log 45
- Explorer, versions supported
 - embedded Web server 71
- extended warranty 500

F

- factory defaults, restoring 44
- fan FN101, removing 202
- fan FN102, removing 176
- fan FN103, removing 178
- fan FN301, removing 204
- fans
 - troubleshooting 242
- fasteners, types of 134
- FastRes 6, 31
- features 3
- feed and pickup rollers, replacing
 - Tray 1 154
- feed rollers, replacing 83
- feed rollers, replacing tray 2 143
- file directory, printing 25
- File Upload, Macintosh 16
- Finnish laser safety
 - statement 509
- firewall settings 41
- Firmware Update, Macintosh 16
- firmware, upgrading 96
- fonts
 - Courier 28
 - included 6
 - list, printing 25
 - permanent resources 88
 - settings 29
 - Upload Macintosh 16
- formatter
 - replacing 153
 - security 77
- formatter cage, removing 152
- formatter cover, removing 152
- formatter lights 245
- formatter, removing 152
- fraud hotline 79
- front cover, removing 174

- fuser
 - cleaning 280
 - modes 30
 - paper jams 315
 - replacing 83, 151
- fuser motor, removing 197
- fuser motor, replacing 197

G

- Getting Started Guide 2
- gray background, problem-solving 330
- guides. See documentation

H

- hard disk
 - initialization 338
- heartbeat LED 245
- heavy paper
 - fuser modes 30
 - output bin, selecting 63
- held jobs
 - Retrieve Job control panel menu 24
 - settings 33
- Help button, control panel 20
- help, Show Me How menu 23
- HP Customer Care 498
- HP Easy Printer Care
 - description 14
 - downloading 14
 - opening 68
 - options 68
 - supported browsers 14
 - supported operating systems 14
- HP fraud hotline 79
- HP Jetdirect print server
 - firmware updates 99
 - installing 93
 - lights 245
 - part numbers 345
 - removing 94
 - settings 38
- HP paper, ordering 346
- HP Printer Utility 14, 16
- HP Printer Utility, Macintosh 14
- HP SupportPack 500
- HP Web Jetadmin
 - firmware updates 98

- HP-UX software 17
- humidity
 - specifications 504

I

- I/O menu 38
- image quality. See print quality
- image repetition, problem-solving 333
- Information menu 25
- information pages
 - printing 66
- Information tab, embedded Web server 72
- initializing
 - hard disk 338
 - NVRAM 338
- installing
 - EIO cards 93
 - memory (DIMMs) 84
 - USB devices 90
- internal components 358
- Internet Explorer, versions supported
 - embedded Web server 71
- IP address
 - displaying 33
- IP addressing 18
- IP Security 75
- IPsec 75
- IPSEC status 41
- IPv6 settings 39
- IPX/SPX settings 40

J

- jams
 - 1,500-sheet tray 312
 - 500-sheet tray 311
 - common causes of 304
 - duplexer 314
 - envelope feeder 309
 - fuser area 315
 - locations 307
 - output bin 320
 - recovery 325
 - recovery setting 36
 - Show Me How menu 23
 - staple 322
 - top-cover 307
 - Tray 1 311

- Japanese VCCI statement 508
- Jetadmin
 - firmware updates 98
- Jetadmin, HP Web 13, 74
- Jetdirect print server
 - firmware updates 99
 - installing 93
 - lights 245
 - part numbers 345
 - removing 94
 - settings 38
- jobs
 - Macintosh settings 16
 - Retrieve Job menu 24
- K**
- kit, maintenance
 - part number 344
- kit, printer maintenance
 - using 83
- Korean EMI statement 508
- L**
- labels
 - fuser modes 30
 - output bin, selecting 63
- landscape orientation
 - setting as default 29
- language, control panel 36
- languages, device
 - settings 35
- laser safety statements 508, 509
- laser/scanner
 - removing 219
- left-side cover, removing 166
- letter paper, override A4
 - settings 27
- letterhead
 - fuser modes 30
- light print
 - problem-solving 329
 - setting toner density 32
- lights
 - formatter 245
- lights, control panel 20
- line spacing, setting default 29
- lines, problem-solving 330, 332, 333
- link speed 43
- Linux software 17
- loading
 - 1,500-sheet tray 59
 - 500-sheet tray 57
 - Show Me How menu 23
 - staples 82
 - Tray 1 56
- Lock Resources, Macintosh 16
- loose toner, problem-solving 330
- M**
- Macintosh
 - AppleTalk settings 40
 - HP Printer Utility 14
 - support 498
- main assemblies
 - locating 263
- maintenance agreements 499
- maintenance kit
 - part number 344
 - using 83
- manual feed
 - settings 28
- manuals. *See* documentation
- margins
 - settings 30
- media
 - A4 settings 27, 28
 - custom-size 27
 - default size, setting 27
 - Show Me How menu 23
 - supported sizes 48
 - tray settings 26
 - usage page 25
- memory
 - installing DIMMs 84
 - NVRAM initialization 338
 - part numbers 345
 - permanent resources 88
 - RAM disk settings 36
 - upgrading 84
 - verifying installation 88
- memory DIMMs
 - security 77
- menu map 25
- menus, control panel
 - accessing 20
 - Configure Device 27
 - Diagnostics 45
 - I/O 38
 - Information 25
- Paper Handling 26
- Print Quality 30
- Printing 27
- Resets 44
- Retrieve Job 24
- Show Me How 23
- System Setup 33
- messages
 - e-mail alerts 16
 - event log 45
 - lights, control panel 20
 - settings 35
- misformed characters, problem-solving 331
- models, feature comparison 3
- motors
 - troubleshooting 242
- N**
- Netscape Navigator, versions
 - supported
 - embedded Web server 71
- network port
 - troubleshooting 334
- Networking tab, embedded Web server 72
- networks
 - device discovery 18
 - diagnostics 41
 - HP Web Jetadmin 74
 - IP address 18
 - link speed 43
 - Macintosh settings 16
 - protocols 38, 43
 - protocols supported 18
 - security settings 41
 - settings 38
 - troubleshooting printing 335
- next-day on-site service 499
- noise specifications 504
- non-HP supplies 78
- nonvolatile memory
 - initialization 338
- number of copies, setting
 - default 27
- NVRAM
 - initialization 338
- O**
- on-site service agreements 499

- online support 498
- operating environment
 - specifications 504
- ordering
 - paper, HP 346
 - part numbers for 342
 - supplies and accessories 342
 - supplies through embedded Web server 73
- orientation, page
 - default, setting 29
- output bins
 - paper jams 320
 - removing rear 150
- output quality
 - defect examples 329
 - repeating defects 280
 - troubleshooting 329
- override A4/letter 27

P

- packaging device 499
- page counts 338
- page orientation
 - default, setting 29
- pages
 - blank 334
 - not printing 334
 - printing slowly 334
- paper
 - A4 settings 27, 28
 - curled 331
 - custom-size 27
 - default size, setting 27
 - fuser modes 30
 - HP, ordering 346
 - loading 1,500-sheet tray 59
 - loading 500-sheet tray 57
 - loading Tray 1 56
 - Show Me How menu 23
 - skewed 331
 - supported sizes 48
 - supported types 50
 - tray settings 26
 - usage page 25
 - wrinkled 332
- Paper Handling menu 26
- paper jams
 - 1,500-sheet tray 312
 - 500-sheet tray 311

- duplexer 314
- envelope feeder 309
- fuser area 315
- locations 307
- output bin 320
- top-cover 307
- Tray 1 311
- paper path test 45
- paper-delivery assembly
 - removing 221
- part numbers
 - assemblies 352
 - cables 345
 - EIO cards 345
 - internal components 358
 - maintenance kit 344
 - memory 345
 - paper, HP 346
 - print cartridges 344
 - trays 343
- parts
 - removal-order list 135
- PCAs
 - diagrams and part numbers 386
- PCL drivers 16
- PCL font list, printing 25
- PCL, setting as device
 - language 35
- PDF error pages 28
- PDF files, printing 84
- perform printer maintenance
 - message 83
- permanent resources 88
- personalities
 - settings 35
- physical specifications 502
- pickup and feed rollers, replacing
 - Tray 1 154
- pickup rollers, replacing 83
- pickup rollers, replacing tray
 - 2 143
- pickup-drive assembly
 - removing 192
- ping test 336
- pliers, required 131
- portrait orientation
 - setting as default 29
- ports
 - supported 6

- post-service tests 133
- postcards
 - output bin, selecting 63
- PostScript
 - setting as device language 35
- PostScript error pages
 - settings 28
- power
 - troubleshooting 242
- power specifications 502
- power supply, high voltage
 - removing 208
- preprinted paper
 - fuser modes 30
- prepunched paper
 - fuser modes 30
- preservice checklist 132
- print cartridges
 - authentication 79
 - density settings 32
 - EconoMode 31, 78
 - features 7
 - genuine HP 78
 - non-HP 78
 - ordering through embedded Web server 73
 - paper jams 307
 - part numbers 344
 - replacement intervals 78
 - replacing 80, 139
 - status messages 20
 - storage 78
 - warranty 496
- print jobs
 - retention 33
- print quality
 - blurred 333
 - defect examples 329
 - dropouts 329
 - gray background 330
 - light print 329
 - lines 330
 - loose toner 330
 - misformed characters 331
 - repeating defects 280, 331
 - repetitive images 333
 - scattered lines 333
 - settings 31
 - smear toner 330
 - specks 329

- test 133
- tire tracks 332
- troubleshooting 329
- white lines 332
- white spots 332
- Print Quality menu 30
- print-quality test 133
- printer languages
 - settings 35
- printer maintenance kit
 - using 83
- printer stand
 - part number 344
- printing
 - troubleshooting 334
- Printing menu 27
- problem-solving
 - blurred print 333
 - curled paper 331
 - dropouts 329
 - e-mail alerts 16
 - event log 45
 - gray background 330
 - light print 329
 - lines 330, 332
 - repeating defects 331
 - repetitive images 333
 - scattered lines 333
 - Show Me How menu 23
 - skewed pages 331
 - smeared toner 330
 - specks 329
 - text quality 331, 333
 - tire tracks 332
 - white spots 332
 - wrinkled paper 332
- processor speed 6
- product
 - electrostatic discharge (ESD) 130
- product comparison 3
- product status
 - HP Easy Printer Care 68
- ProRes 6
- protocols, network 18, 38, 43
- Proxy Server settings 40
- PS Emulation drivers 16
- PS error pages
 - settings 28
- PS font list, printing 25

- PS, setting as device
 - language 35
- punched paper
 - fuser modes 30
- Q**
- quality
 - defect examples 329
 - repeating defects 280
 - troubleshooting 329
- quick copy jobs 33
- R**
- RAM disk
 - settings 36
- rear output bin
 - paper jams 320
 - printing to 63
 - removing 150
- recovery, jam 36
- registration assembly
 - removing 159
- registration settings 30
- remote firmware update (RFU) 96
- removing
 - order of parts 135
 - parts, order 135
 - screws 130
- removing parts
 - cautions for 130
 - checklists 132
 - order 135
 - tools, required 131
- repacking device 499
- repeating defects 280
- repeating defects, problem-solving 331, 333
- replacing
 - screws 130
- replacing printing cartridges 80
- required tools
 - user-replaceable parts 131
- Resets menu 44
- resolution
 - features 6
 - settings 16, 31
 - troubleshooting quality 329
- Resolution Enhancement technology (REt) 16, 31

- resource saving 88
- restoring default settings 44
- REt (Resolution Enhancement technology) 16, 31
- retention, job
 - Retrieve Job menu 24
 - settings 33
- Retrieve Job menu 24
- right-side cover
 - removing 163
- rollers
 - 1,500-sheet tray, removing 225
 - locating 263
 - repetitive defects 280
 - transfer, replacing 145
 - Tray 1 pickup and feed, replacing 154
 - tray 2 separation, pickup, and feed, replacing 143
- rollers, replacing 83
- rough paper
 - output bin, selecting 63
- S**
- safety statements 508, 509
- saving resources, memory 88
- screwdrivers, required 131
- screws
 - removing 130
 - replacing 130
- screws, types of 134
- security
 - network settings 41
- security features 75
- sensors
 - manual test 250
- separation roller
 - replacing 157
- separation rollers, replacing tray 2 143
- service
 - after-service check list 132
 - before service checklist 132
 - checklist, after service 132
 - checklist, before service 132
 - checklist, post-service 132
 - checklist, preservice 132
 - post-service checklist 132
 - preservice checklist 132

- repacking device 499
- tools, required 131
- service agreements 499
- Service ID 339
- settings
 - restoring defaults 44
- Settings tab, embedded Web server 72
- shipping device 499
- Show Me How menu 23
- show-me-how pages
 - printing 66
- SIMMs, incompatibility 84
- skewed pages 331
- Sleep mode
 - delay, setting 34
 - power specifications 502
 - turning on or off 44
- small paper, printing on 63
- smearred toner, problem-solving 330
- software
 - embedded Web server 13
 - HP Easy Printer Care 14, 68
 - HP Printer Utility 14
 - HP Web Jetadmin 13
- Solaris software 17
- special media
 - guidelines 53
- special paper
 - guidelines 53
- specifications
 - acoustic 504
 - electrical 502
 - operating environment 504
 - physical 502
- specks, problem-solving 329, 332
- speed
 - resolution settings 31
- spots, problem-solving 329, 332
- stacker
 - part number 344
 - printing to 64
- staple cartridges
 - loading 82
 - part numbers 344
- staple jams 322
- stapler/stacker
 - jams, staple 322

- loading staples 82
- part number 344
- printing to 64
- static precautions 130
- status
 - embedded Web server 72
 - HP Easy Printer Care 68
 - HP Printer Utility, Macintosh 16
 - supplies page, printing 25
- status, supplies
 - control panel messages 20
- storage, job
 - Macintosh settings 16
 - Retrieve Job menu 24
 - settings 33
- stored jobs
 - security 75
- storing
 - print cartridges 78
- straight-through paper path 63
- strategy
 - parts, removal 130
 - parts, replacement 130
- supplies
 - authentication 79
 - counterfeit 79
 - non-HP 78
 - ordering 342
 - ordering through embedded Web server 73
 - part numbers 344
 - replacement intervals 78
 - replacing print cartridges 80
 - status page, printing 25
 - status, viewing with embedded Web server 72
 - status, viewing with HP Printer Utility 16
- supplies, status
 - control panel messages 20
 - HP Easy Printer Care 68
- support
 - embedded Web server links 73
 - HP Printer Utility pages 16
 - online 498
 - repacking device 499
- supported media 48
- SupportPack, HP 500

- symbol sets 29
- system requirements
 - embedded Web server 71
- System Setup menu 33
- T
- TCP/IP settings 38
- technical support
 - online 498
 - repacking device 499
- temperature specifications 504
- tests
 - manual sensor test 250
 - network 41
 - post-service 133
 - print-quality 133
- text, problem-solving
 - blurred 333
 - misformed characters 331
- three-hole punched paper
 - fuser modes 30
- time, setting 33
- timeout settings
 - held jobs 33
 - I/O 38
 - Sleep mode 34
- timing chart 273
- tire tracks, problem-solving 332
- toner
 - density setting 16, 32
 - EconoMode 31, 78
 - output quality, problem-solving 330
- toner cartridges. *See* print cartridges
- tools, required
 - user-replaceable parts 131
- top cover
 - paper jams, clearing 307
- top cover, removing 161
- top output bin
 - paper jams 320
 - printing to 63
- transfer roller
 - replacing 145
- transfer rollers, replacing 83
- transparencies
 - fuser modes 30
 - HP, ordering 348
 - output bin 63

- Tray 1
 - loading 56
 - manual feed settings 28
 - paper jams 311
 - pickup and feed rollers, replacing 154
 - settings 26
- tray 1
 - paper-pickup assembly, removing 216
 - separation roller, replacing 157
- Tray 2
 - settings 26
- tray 2
 - extension door, removing 149
 - separation, pickup, and feed rollers, replacing 143
- Tray 3
 - physical specifications 502
- trays
 - configure 61
 - custom-size settings 27
 - loading 1,500-sheet tray 59
 - loading 500-sheet tray 57
 - loading Tray 1 56
 - Macintosh settings 16
 - manual feed settings 28
 - paper jams 307, 311, 312
 - paper orientation 54
 - paper path test 45
 - part numbers 343
 - registration settings 30
 - settings 26
 - Show Me How menu 23
- trays, status
 - HP Easy Printer Care 68
- troubleshooting
 - 1,500-sheet tray paper jams 312
 - 500-sheet tray paper jams 311
 - blank pages 334
 - checklist 240
 - duplexer jams 314
 - duplexing 328
 - envelope feeder jams 309
 - fuser-area paper jams 315
 - network cable 334
 - network printing 335
 - output bin jams 320
 - pages not printing 334
 - pages printing slowly 334
 - paper jams 307
 - power-on 242
 - print quality 329
 - process 242
 - quality 329
 - repeating defects 280
 - staple jams 322
 - top-cover paper jams 307
 - Tray 1 paper jams 311
 - USB cable 334
- two-sided printing
 - binding edge settings 27
 - Macintosh settings 16
 - Show Me How menu 23
 - usage page 25
- U**
- UNIX
 - carriage return settings 29
- UNIX software 17
- upgrading firmware 96
- upgrading memory 84
- usage page 25
- USB cable, part number 345
- USB devices
 - installing 90
- USB port
 - supported 6
 - troubleshooting 334
- User Guide 2
- user-replaceable parts
 - required tools 131
 - tools required 131
- V**
- vertical spacing, setting
 - default 29
- voltage specifications 502
- W**
- wake time
 - changing 35
- warnings setting 35
- warranty
 - customer self repair 497
 - extended 500
 - print cartridges 496
 - product 495
- wavy paper, problem-solving 331
- Web browser requirements
 - embedded Web server 71
- Web Jetadmin
 - firmware updates 98
- Web sites
 - customer support 498
 - fraud reports 79
 - HP Web Jetadmin, downloading 74
 - Macintosh customer support 498
 - ordering supplies 342
- weekly on-site service 499
- weight, product 502
- white lines or spots, problem-solving 332
- Wide A4 settings 28
- Windows
 - drivers supported 16
- wrinkled paper, problem-solving 332

© 2008 Hewlett-Packard Development Company, L.P.

www.hp.com



CB506-90950